

To our distinguished owner

New 450Rally Two-Wheel Motorcycle Instruction Manual

First Edition (December 2023)

First of all, congratulations on your purchase of a brand new KOVEMOTO!

If you choose products of KOVEMOTO, you will become a member of the KOVEMOTO family.

This Instruction Manual introduces the main specifications, basic structure, adjustment method and maintenance knowledge of the motorcycle. It will guide you to master the basic operation of the motorcycle and eliminate or reduce common faults, which can effectively ensure driving safety, play the best performance of the vehicle, and improve the service life of the vehicle.

This Instruction Manual contains the introduction of the basic configuration of the motorcycle. The contents and pictures are for reference only, please refer to the physical object.

Due to the production time, user needs and design improvements, the actual motorcycle may be different from the contents of the Manual. We reserve the right to make changes at any time, and we will no longer notify and assume any obligations. Sorry for any inconvenience caused.

The Instruction Manual is one of the necessary accessories of the motorcycle, and when it is sold to others, it should be attached to the motorcycle.

The copyright of this Instruction Manual belongs to the company, and no reproduction is allowed without the written consent of the company, and violators will be prosecuted.

To ensure your safety, and increase your riding pleasure:

- Please read the Instruction Manual carefully.
- Please follow all recommendations and procedures in the Instruction Manual.
- Please pay close attention to the safety information recorded in the Instruction Manual and pasted on the motorcycle body.

Safety Precautions

The safety of you and others is very important, and the safe driving of this motorcycle is an important responsibility.


To help you make an informed decision about your safety, we provide steps and other information on the safety label and in the Instruction Manual to remind you. This information is intended to alert you to the potential danger of harm to you or others.

It is impractical for us to list all the hazards associated with motorcycle riding and maintenance, and you must make the right judgment yourself.

It is forbidden to install electrical equipment, because the battery used in the motorcycle is a lithium battery. Its battery capacity is small, and the installation of electrical equipment may cause a loss of power.

The motorcycle is equipped with a high-speed engine. For your driving safety, it is recommended that you reduce violent driving.

You'll see important security information in a variety of forms, including:

- Safety labels on the body of a motorcycle;
- The safety information is preceded by a safety warning symbol  and one of the following three warnings : Caution, danger, and warning.

 **Caution** - If you do not follow the instructions, you may be injured.

 **Danger** - If you do not follow the instructions, you will cause serious casualties.

 **Warning** - If you do not follow the instructions, you will cause serious casualties.

Other important information is listed under the following headings:

Notes - Information to help you avoid damage to your motorcycle, other property, or the environment.

Contents

Motorcycle Safety4

User Manual13

Maintenance31

Fault Handling68

Relevant Information75

Technical Parameters83

Motorcycle Safety

This section contains important information about the safe riding of motorcycles, please read this section carefully.

Safety Instructions	5
Safety Precautions	8
Riding Precautions.....	9
Spare Parts and Modifications	12
Loading Guide	12

Safety Instructions

To enhance your driving safety, please follow these guidelines:

- Perform all routine and routine inspections as specified in the Instruction Manual.
- Before filling the tank, turn off the engine and keep away from sparks and open flames.
- Do not start the engine for a long time in a closed or semi-closed space, because the exhaust gas contains carbon monoxide, which is a toxic gas and can be fatal.

Always wear a helmet

It has been proven that helmets and protective clothing can significantly reduce the chance of injury to the head and other parts, and reduce the degree of injury. Therefore, please be sure to wear a certified motorcycle helmet and protective clothing when driving.

Before the ride

Make sure you're in good physical condition, paying attention, and not drinking or taking medication. Make sure that you and your passengers are wearing a certified motorcycle helmet and protective clothing. Make sure your passenger to hold onto the rear grab handle or hold your waist, place his/her feet on the pedals, and lean with you when you turn, even when the motorcycle is stopped.

Take time to study and practice

Even if you have driven other motorcycles, you should practice riding this motorcycle in a safe area to familiarize yourself with the operation and operation of this motorcycle and adapt to the size and weight of the motorcycle.

Have a sense of protection when riding

Always pay attention to the vehicles around you, do not think that other drivers can see you, always be prepared to make emergency brakes or avoid detours.

Make yourself easier to see

Especially at night, wear bright reflective clothing to make yourself more eye-catching, stop so that other drivers can see you, turn on the signal light before turning or changing the lane, and when necessary, use the horn to remind pedestrians.

Don't drink and ride

Alcohol and driving are not compatible. Never exceed your personal ability when driving, and do not exceed the speed specified by the vehicle, fatigue and negligence will weaken your ability to make correct judgments and safe driving.

Keep your motorcycle in a safe state

It is important to take good care of your motorcycle so that your motorcycle is always in good condition. Check your motorcycle before each ride and complete all recommended maintenance and repairs. **Do not modify motorcycles or add accessories that will affect safety without authorization, and overload is strictly prohibited.**

Dealing with incidents

Your personal safety is your first priority. If you or anyone else is injured, you should first carefully evaluate the severity of the injury and determine whether it is safe to continue driving, and call for emergency assistance if necessary. If other persons or vehicles are involved in a collision, the applicable local laws and regulations should also be followed.

If you decide to continue driving, first turn the ignition switch to the "⊗" (off) position, and then evaluate the condition of the motorcycle. Check whether there is oil leakage, check whether the key nuts and bolts are fastened, and check the steering handle, steering column, brake and wheel to ensure that the personnel and vehicle are safe. Please drive slowly and carefully. Your motorcycle may have suffered damage that will not be immediately apparent, please submit it to a special repair shop or a qualified special repair shop of KOVEMOTO for a thorough inspection as soon as possible.

Carbon monoxide hazard

The exhaust gas contains toxic carbon monoxide, a colorless and odorless gas, and inhaling higher concentrations of carbon monoxide can cause people to lose consciousness and may even be fatal.

Do not start the engine for long periods of time in a garage or other enclosed space.

▲ Warning

- If the engine is started for a long time in a closed or semi-closed space, it may cause a rapid accumulation of toxic carbon monoxide gas.
- Inhaling this colorless, odorless gas causes rapid loss of consciousness and death.
- Motorcycle engines should only be started in well ventilated outdoor areas.

Safety Precautions

- Be careful when riding, always keep your hands on the throttle grips and your feet on the pedals.
- Make sure that the passenger grasps the grab handle or hugs your waist while driving, and puts his/her feet on the pedals.
- Always pay attention to the safety of riders, passengers and other drivers on the road.

Protective clothing

Make sure that you and any accompanying passenger are wearing a certified motorcycle helmet, goggles and eye-catching protective clothing, and drive carefully according to the weather and road conditions.

■ Helmet

It is certified to safety standards, eye-catching, and sized to fit your head size.

- It must be safe and comfortable and secured with a chin strap.
- It does not obstruct the line of sight of the mask or other certified goggles.

■ Gloves

High-wear-resistant full-finger leather gloves.

■ Boots or riding shoes

Boots that are strong and slip-resistant and protect the ankle.

■ Clothing

It includes a protective eye-catching long-sleeved shirt suitable for riding and wear-resistant pants (or protective suits).

▲ Warning

- Not wearing a helmet increases the chance of serious injury in an accident.
- Make sure that you and your passengers always wear certified helmets and protective clothing.

Riding Precautions

Run-in period

Follow these guidelines during the first 500 km of driving to ensure the motorcycle's later reliability and performance.

- Avoid full throttle start or rapid acceleration.
- Avoid emergency braking and rapid downshifting.
- Ride carefully.

Brake

Follow the following guidelines:

- Avoid excessive emergency braking and downshifting
 - ▶ Sudden braking will reduce the stability of the motorcycle.
 - ▶ Slow down before turning, or you may slip.
- Be careful when driving on slippery roads
 - ▶ Tyres are easier to slide on slippery surfaces and require longer braking distances.
- Avoid continuous braking
 - ▶ In the long and steep slope down the slope, repeated braking will lead to serious overheating of the brake, affecting the braking effect. You should use the engine brake and use the brake intermittently to slow down.
- The front and rear brakes can be used at the same time to achieve a complete braking effect.

Engine brake

When you release the accelerator, the engine braking will help the motorcycle slow down. If you want to slow down further, you can downshift to a lower gear. When going downhill on a long and steep slope, you should use engine braking and apply the brakes intermittently to slow down.

A humid and rainy environment

In a wet and rainy environment, the road surface will be wet and slippery, and the wet brake will also reduce the braking efficiency. You need to be very careful when braking. If the brake is wet, it can be intermittently repeated during low-speed driving and riding, which helps to dry the brake quickly.

Parking

- Stay on solid, flat ground.
- If you must stop on a slightly inclined or loose ground, make sure to stop the motorcycle and make sure that the motorcycle cannot move or tip over.
- Ensure that high temperature parts do not come into contact with flammable materials.
- Do not touch the engine, muffler, brake and other high temperature parts before cooling.
- To avoid the possibility of theft, be sure to lock the steering handle and remove the key before leaving the unattended motorcycle.

Stop the motorcycle with the side support

1. Extinguish engine.
2. Lower side support.
3. Tilt the motorcycle slowly to the left until its weight is concentrated on the side bracket.
4. Turn the steering handle completely to the left.
 - ▶ If the steering handle is turned to the right, it will reduce stability and may cause the motorcycle to fall.

Fueling/brake fluid and fuel guide

Follow these guidelines to protect your engine and catalytic converter:

- Use only unleaded gasoline.
- It is recommended to use high octane gasoline. The use of low octane gasoline will reduce the performance of the engine.
- It is not recommended to use ethanol gasoline, which will reduce the performance of the engine.
- Do not use spoiled or contaminated gasoline, or oil-gasoline blends.
- Prevent dirt and water from entering the tank.
- Since the brake fluid has a certain corrosive effect, be sure to avoid splashing into the eyes, adhering to the skin and avoiding contact with nonmetallic materials of the vehicle when adding.

Spare Parts and Modifications

We strongly recommend that you do not use any accessories other than KOVEMOTO, and do not modify the original design of the motorcycle, which will cause the motorcycle to be unsafe. Unauthorized modifications to your motorcycle will void your warranty service and result in your motorcycle being unable to legally drive on public roads and highways. Before you decide to add accessories to your motorcycle, first determine which modifications are safe and legal.

It is prohibited to attach a trailer or a sidecar to a motorcycle and to modify or install other equipment at the engine installation point. Your motorcycle does not have the design of these accessories, and their use will seriously damage the maneuverability and safety of the motorcycle.

▲ Warning

- Improper accessories or modifications may cause safety accidents, in which you may be seriously injured or even life-threatening.
- Please follow all instructions in the Instruction Manual for accessories and modifications.

Loading Guide

- The additional load will affect the maneuverability, braking and stability of the motorcycle. When riding with heavy loads, be sure to maintain a safe speed.
- Please keep within the specified loading limit, the maximum payload of the whole vehicle is 165kg, do not overload.
- Fix all luggage and place it evenly and smoothly near the center of the motorcycle.
- Do not place objects in the headlights or Mufflers.

▲ Warning


- Overloading or improper loading will lead to accidents, resulting in serious casualties.
- Please follow the loading instructions in the Instruction Manual.

User Manual

This section contains important information about the operation of the motorcycle, please read this section carefully.


Parts Location Diagram	14
Instruments	16
Roadbook	16
Speedometer	20
Heading Indicator	23
Switch	25
Start the Engine	27
Gear Shifting.....	28
Quick Shift System	29
Refueling	30

Component Location Diagram

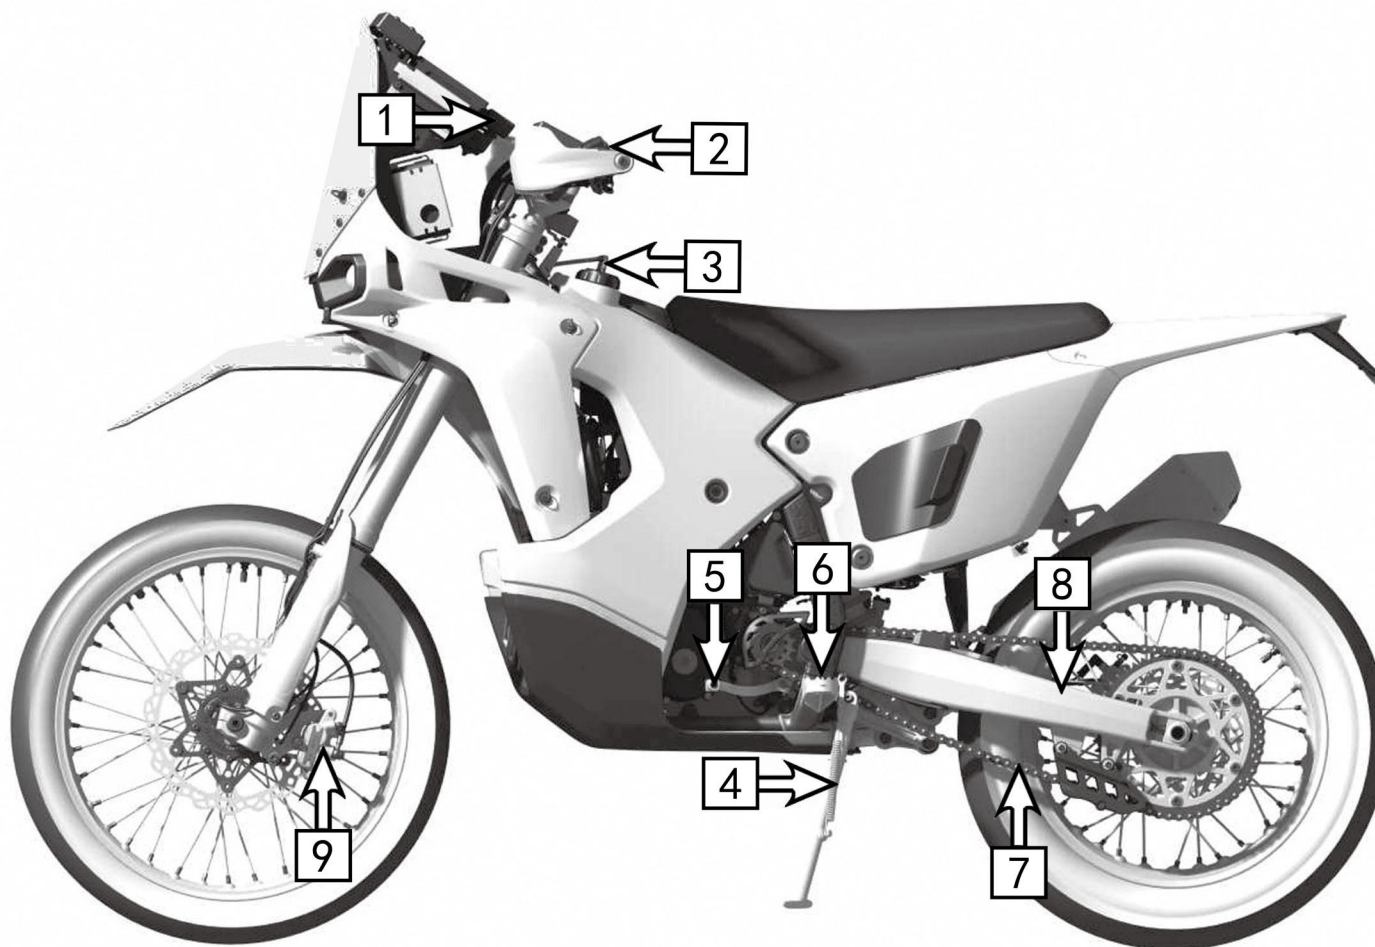

1.Instrument assembly 2.Left combination switch 3.Fuel tank assembly 4.Side stand 5.Shift pedal 6.Left front footpeg
7.Chain 8.Swingarm 9.Vehicle speed sensor

Component Location Diagram

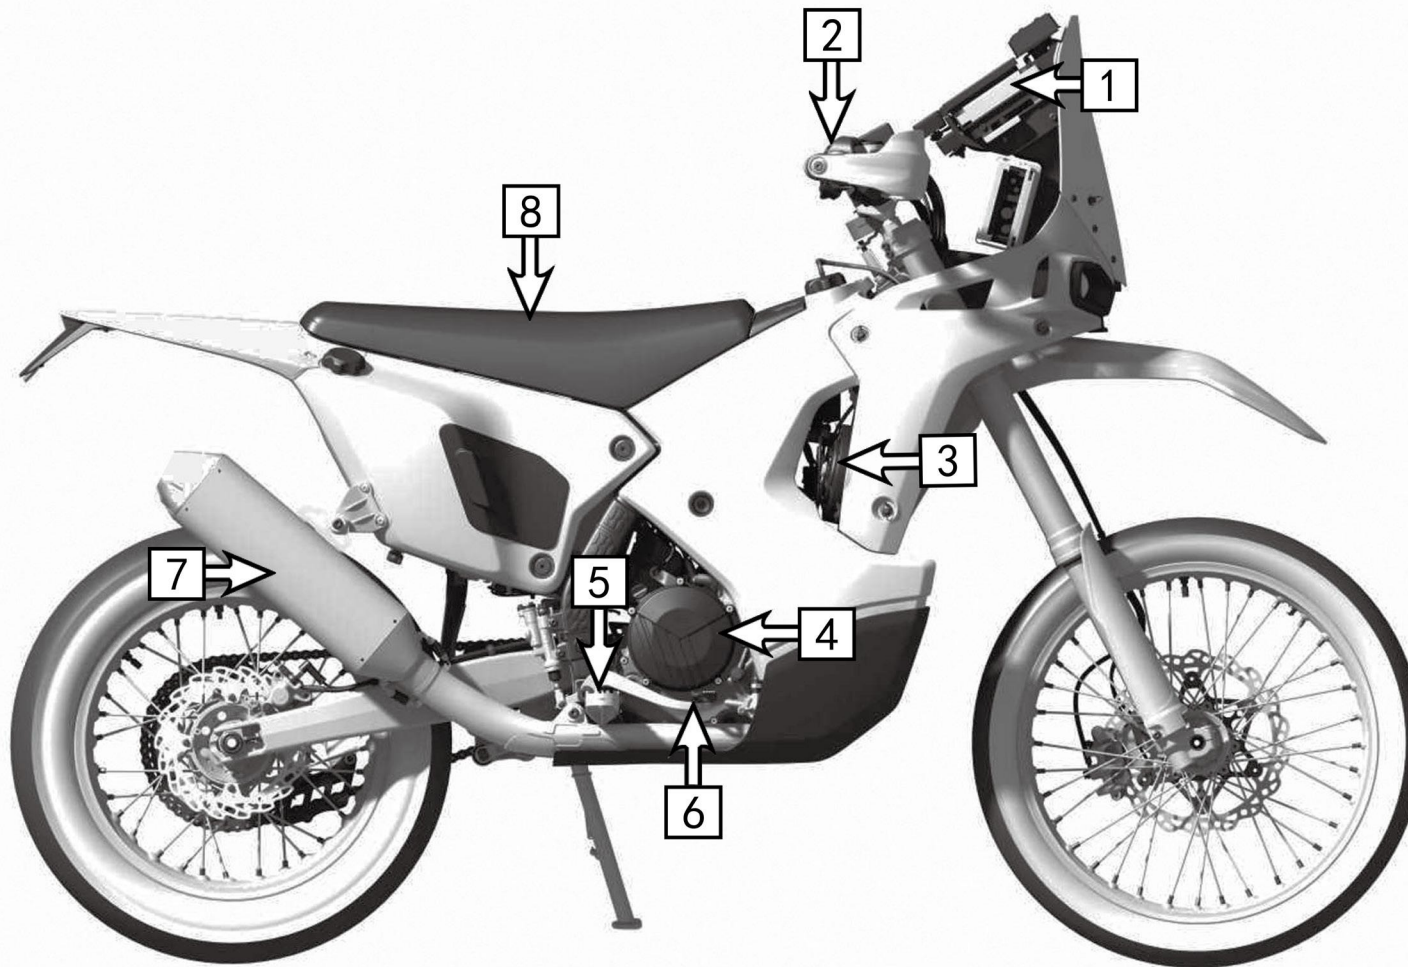

1.Roadbook assembly 2.Right combination switch 3.Radiator assembly 4.Engine 5.Right front footrest 6.Rear brake pedal 7.Muffler 8.Seat cushion assembly

Instruments



Display check


When the engine is started, the instrument is powered on to play the start-up animation, and then self-test is performed, and all functional modules and symbols are displayed. If the display is missing during self-test, Please go to the special repair shop of KOVEMOTO for repair.

Instrument Interface Description



S/N	Name	Functional Description
1	Tachometer	Engine speed display
2	Speedometer	Display the current speed
3	Electronic injection malfunction indicator light	When the electronic injection system fails, this lamp lights up (after the engine is powered on and started normally, the failure lamp goes out as a normal phenomenon)
4	Fuel warning indicator	① 3s/flash: malfunction on oil pump selector switch, malfunction on fuel level sensor signal ② 1 flash/s: low fuel level ③ 3 flashes/s: oil pump malfunction ④ Constant light: fuel level alarming
5	Launch indicator	When the launch control button is pressed, the indicator light starts blinking; when the launch control function is ready, the indicator light stays on steadily
6	Odometer	Display total vehicle mileage and sub-total mileage
7	Speed limit indicator	When one bar is displayed, the speed limit is 30 km/h; when two bars are displayed, the speed limit is 50 km/h; when no bars are displayed, there is no speed limit
8	Neutral indicator	When in neutral, this light turns on
9	Water temperature indicator	When the water temperature is too high, this light turns on


Roadbook

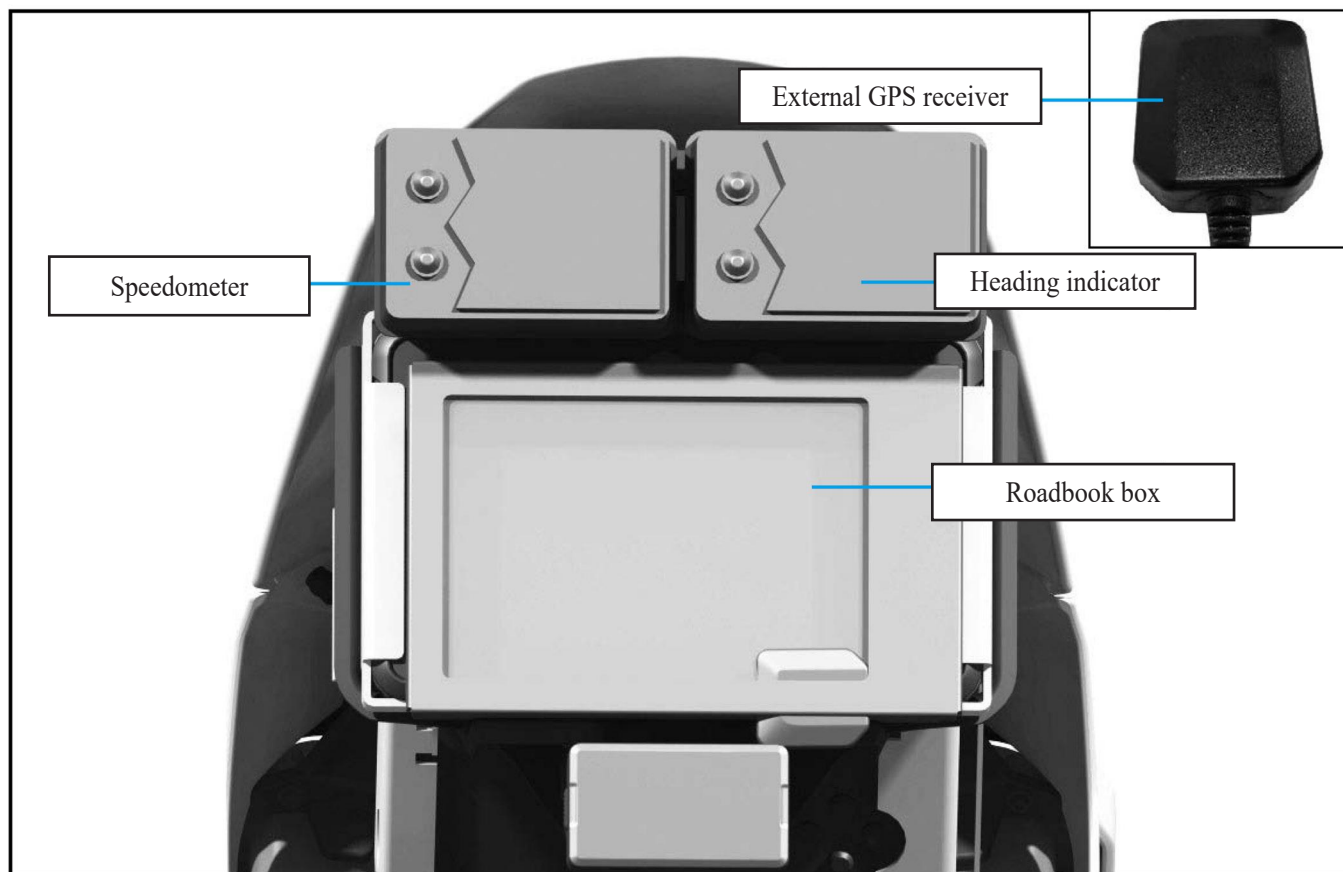

External GPS receiver


Fix the external GPS receiver in an open space on the front of the vehicle, and place the vehicle in an outdoor open area to facilitate GPS signal reception.

Roadbook Box

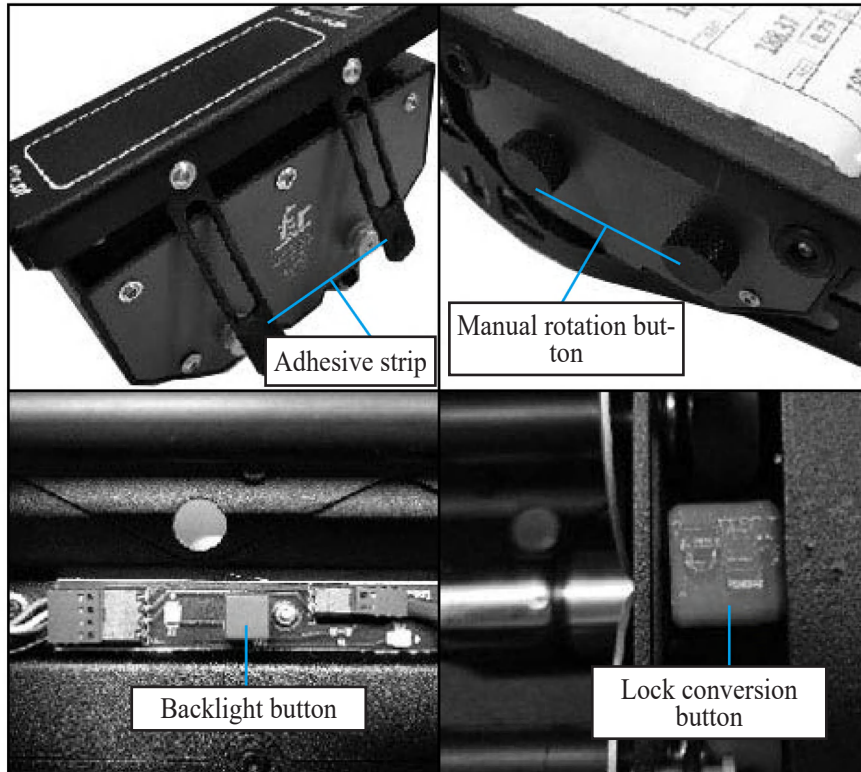

1. Pull the adhesive strip downward to open the top cover of the roadbook box
2. Roadbook box manual knob
3. Press the red button to turn the roadbook backlight on/off
4. Lock conversion button
 - ① Push the button upward to prevent the manual wheel of the roadbook box from scrolling down.
 - ② Push the button downward to prevent the manual wheel of the roadbook box from scrolling up.

Speedometer

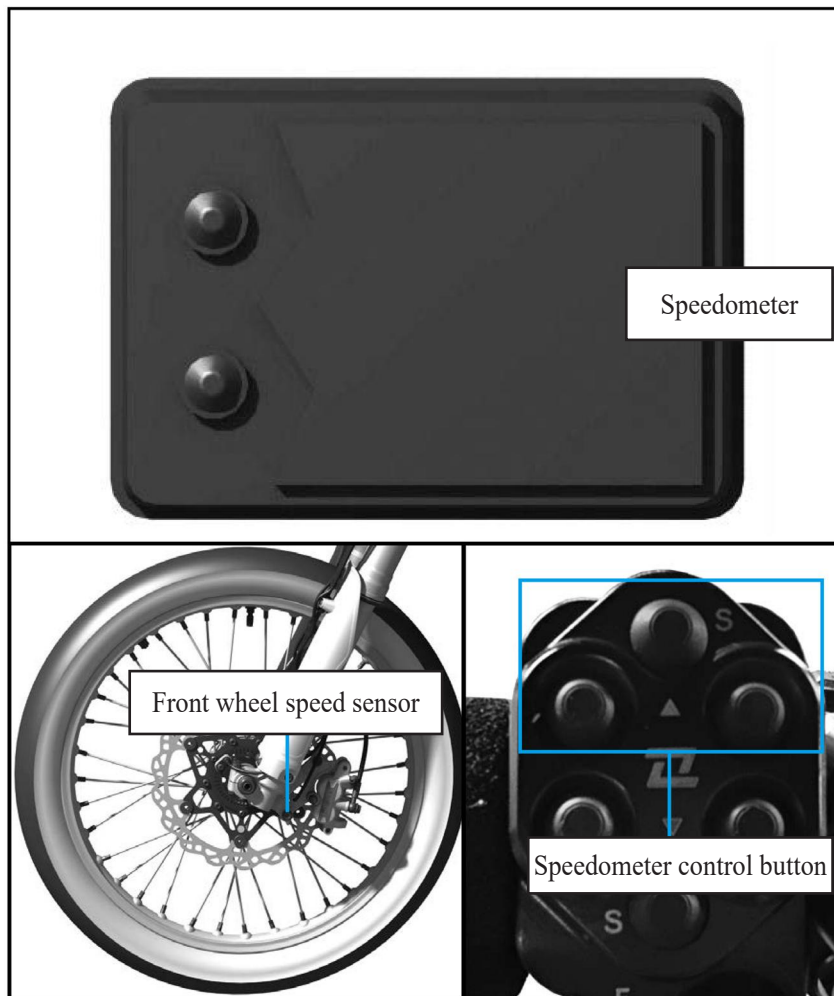

Power ON and OFF

1. Press any button on the left side of the speedometer briefly to turn it on.

After startup, the speedometer will enter sleep mode automatically after 20 minutes if there is no button operation or wheel movement.

The speedometer automatically activates when the wheels are rotating.

2. Press and hold both the up and down keys on the left side of the speedometer simultaneously to turn it off.


Mode setting

After the instrument is powered on, press and hold the down key to access settings, including miles/kilometers, tire circumference, speed display, time display, mileage display, and driving time.

Example: Tire Circumference Setting: Short-press the down key in the instrument setting mode to enter


The "Circ" icon will be displayed. Short-press the down key to show the current set value on the instrument interface, and short-press the upper button to modify the value. Short-press the up key one time to increase the value by one. Short-press the down key to select the digit to be set, which will shift left by one position. After modification, press and hold the down key to save the data. Short-press the down key to enter the next setting item.

Circumference setting

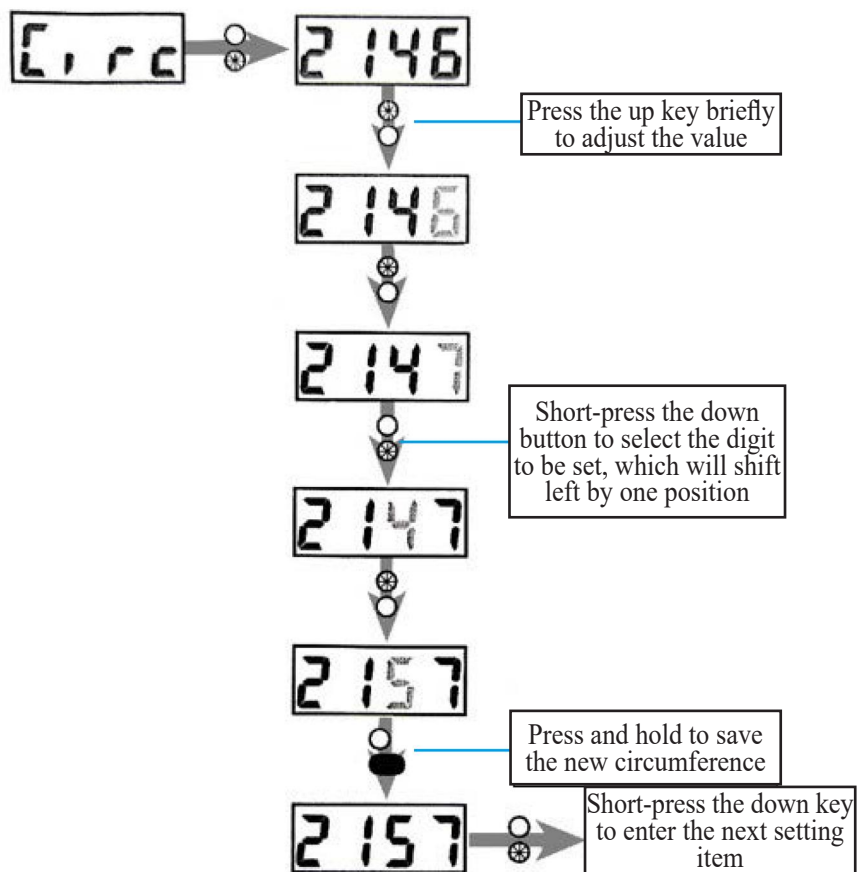


Precision and brightness setting

Precision setting

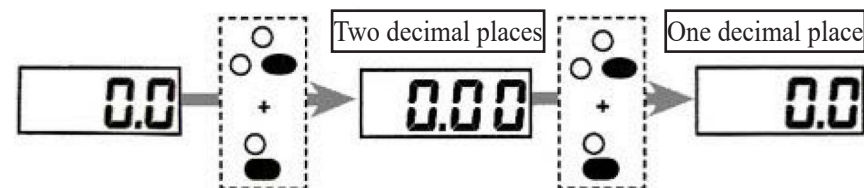

Simultaneously press and hold the speedometer control down key and the left down key on the instrument panel to enter precision mode settings.

Brightness settings

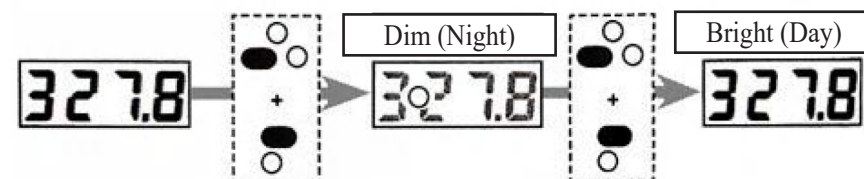


Simultaneously press and hold the speedometer control up key and the left up key on the instrument panel to enter brightness mode settings.


Notes

- The wheel symbol in the icon represents a short press, while the black oval represents a long press.


Display setting

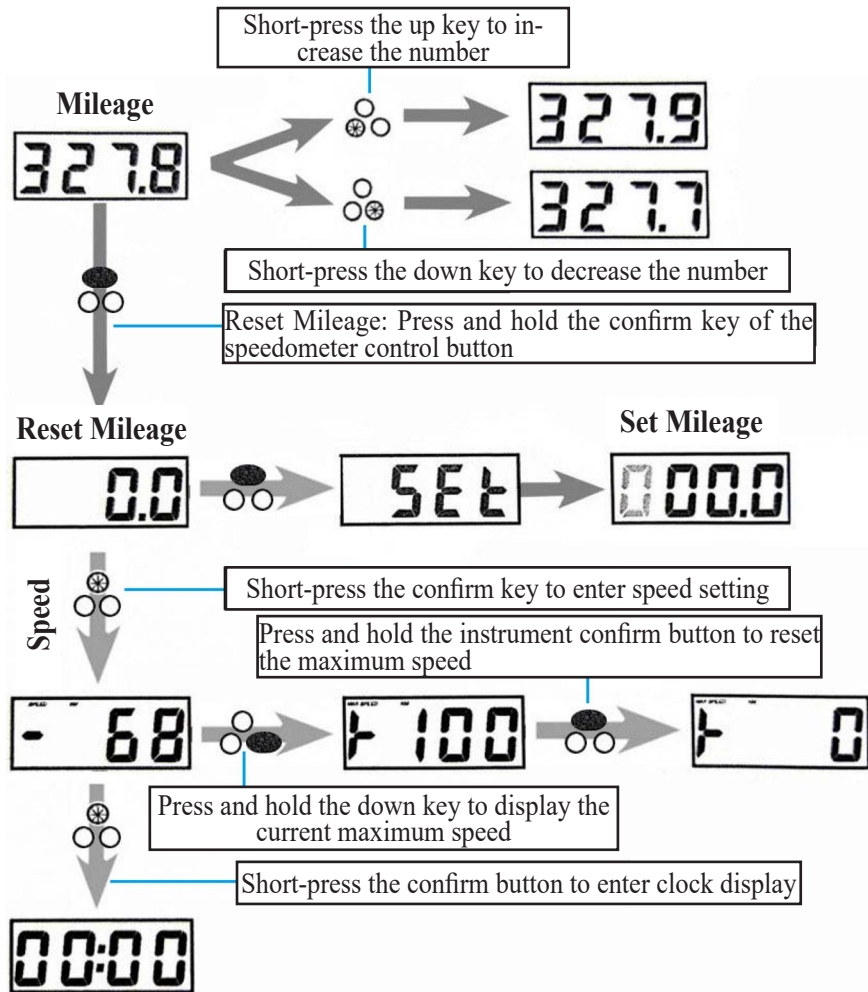

Clock setting

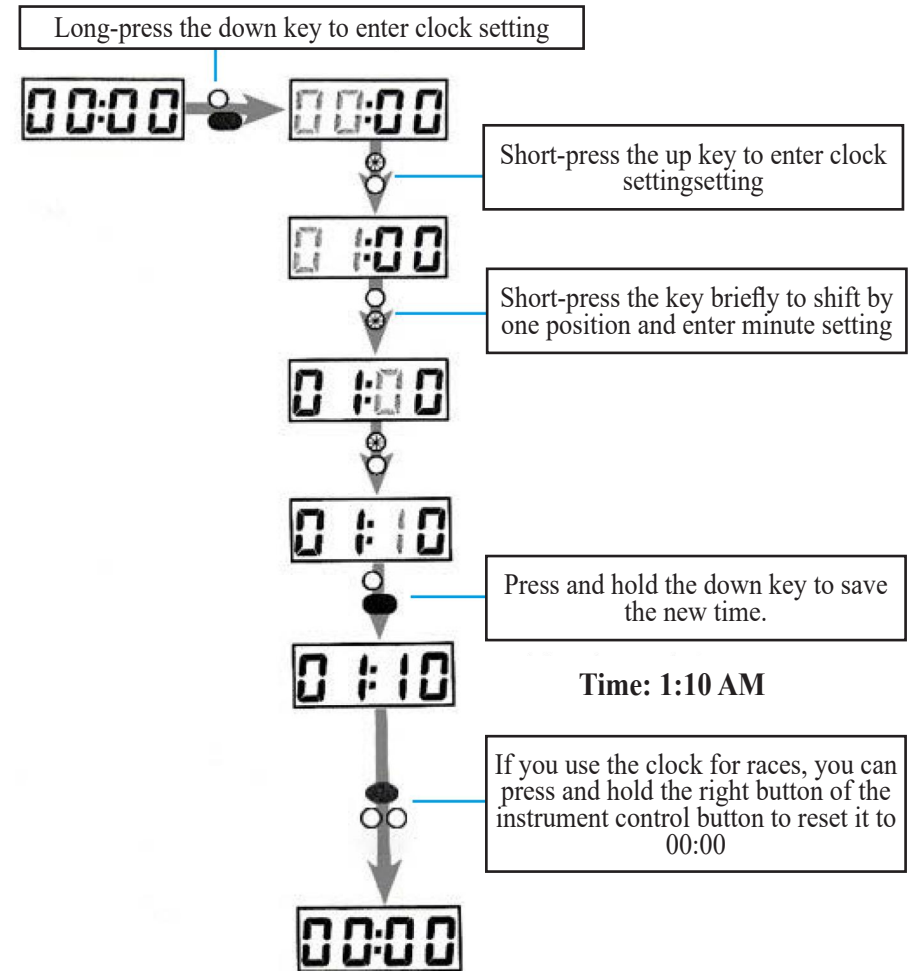

Heading Indicator

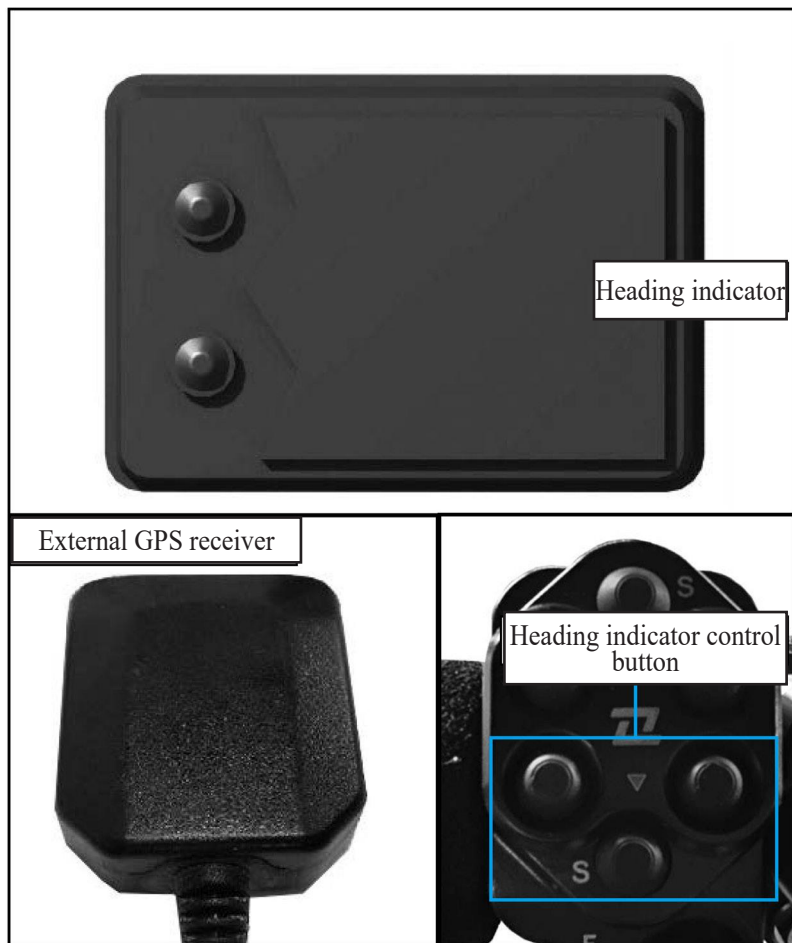


GPS receiver

The heading indicator is a high-precision racing instrument based on GPS. Install the GPS receiver in a horizontal position whenever possible to ensure satellite signal acquisition. When you turn on the heading indicator, the LCD display will flash while the GPS receiver is acquiring satellite signals. Once the display stops flashing, you can start riding.

If the GPS signal is lost during the ride, the LCD display will blink and the GPS indicator on the LCD will light up. During the signal loss, the screen will display the last known distance and speed with flashing. Once a new signal is received, continue riding, and the cumulative distance will be calculated.

Display setting

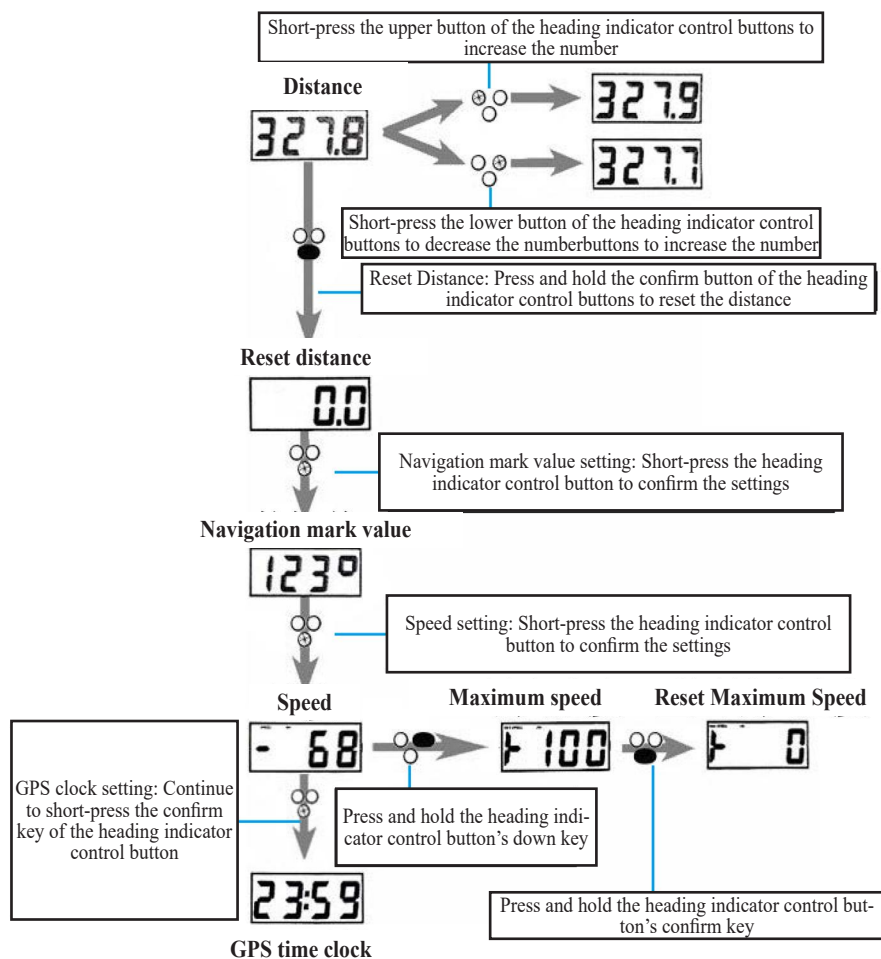

Power ON/OFF and heading indicator setting

Power ON and OFF


1. Press any button on the left side of the heading indicator briefly to turn it on. After startup, the heading indicator will enter sleep mode automatically after 2 hours if there is no button operation or movement.
2. Press and hold both the up and down buttons on the left side of the heading indicator simultaneously to turn it off.

Heading indicator setting

After the heading indicator is powered on, press and hold the down key to access settings for miles/kilometers, speed display, time display, time zone display, mileage display, and driving time. The setting method can be adjusted by referring to the speedometer.

Switch

Left combination switch

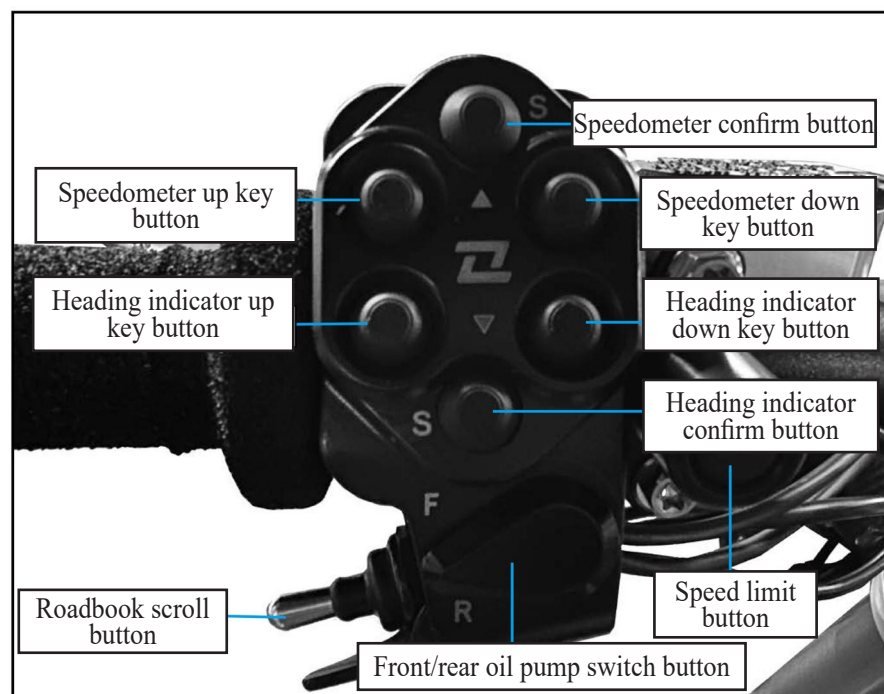

Speedometer up, down, and confirm buttons:

Once pressed, it controls the relevant functions of the speedometer

Heading indicator up key, down key, and confirm button:

Once pressed, they control the relevant functions of the heading indicator

Speed limit button:

After pressing, the upper limit display on the instrument will be activated; short-press for speed limit control, or press and hold for three seconds to enable the launch control function.

Front and rear oil pump switch buttons:


Toggle up to “F” to switch to the front brake oil pump; toggle down to “R” to switch to the rear brake oil pump.

Roadbook scroll button:


After power-off, the roadbook scroll button can be switched to manual mode to continue operating the roadbook box.


Switch

Right combination switch

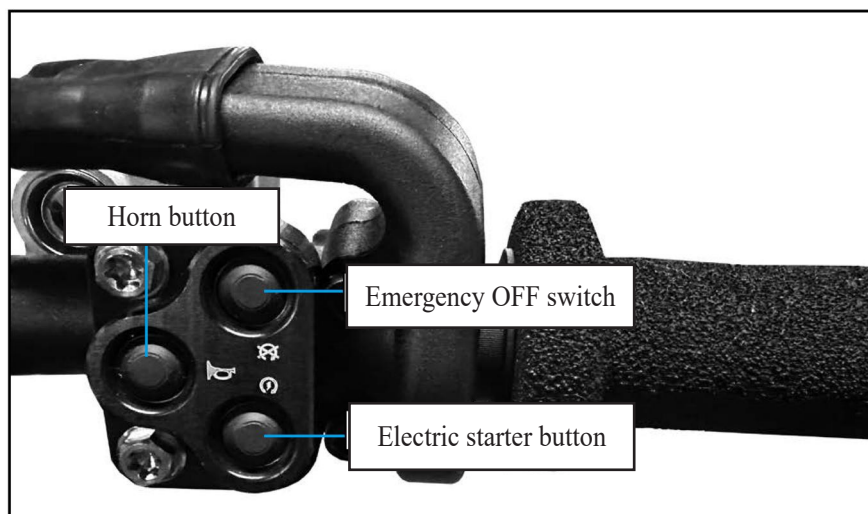

Power button:

 
When the switch button “” (activate) is pressed, the engine starts;

When the switch button “” (stop) is pressed, the engine stops working.

Notes

- To extend the lifespan of the switch, it is recommended to blow out any accumulated water inside the switch after car washing or heavy rain.

Start the Engine

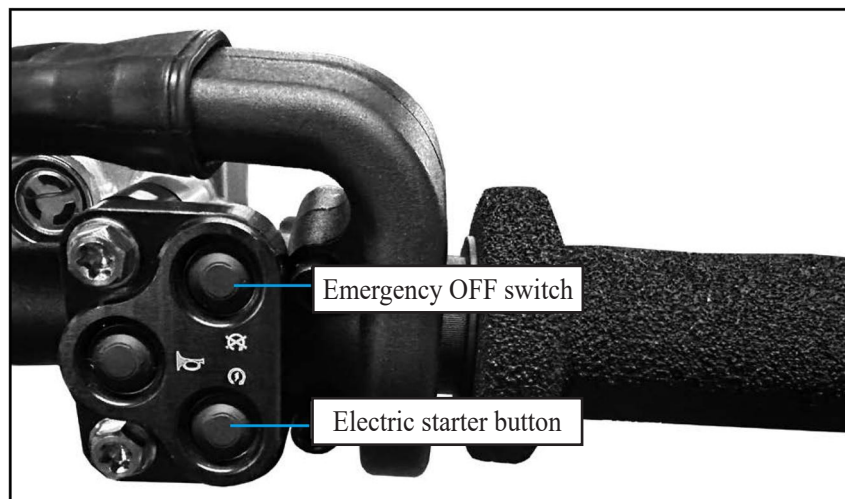

Regardless of whether the engine is cold or hot, please follow the instructions below to start the engine.

1. Shift the gear to neutral, or pull the clutch lever and retract the side stand, then start the motorcycle with the transmission in gear.

2. With the throttle fully closed, press the starter button to start the motorcycle.

If the engine fails to start:


If the engine does not start within 3 seconds, wait for 10 seconds before repeating step 4.

Notes

- If the engine starts but idles unevenly, slightly increase the throttle.
- Prolonged high-speed idling and rotation can harm the engine and exhaust system.
- Sudden acceleration or prolonged idling at high speed for more than 5 minutes may cause the exhaust pipe to discolor.
- If the throttle is fully open, the engine will not start.

Shift Gears

Your motorcycle features 6 forward gears with a 1-down, 5-up shifting pattern.

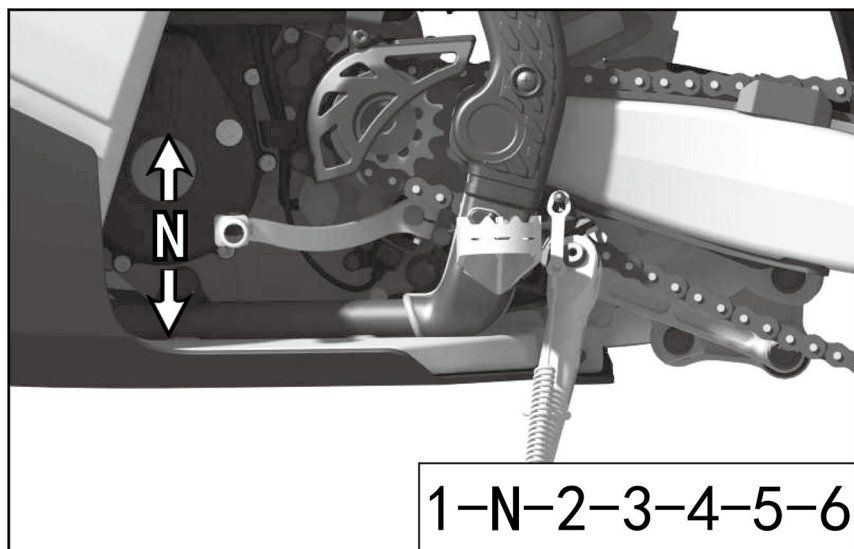

How to shift gears:

Warm up the engine to ensure smooth operation.

1. When the engine is idling, disengage the clutch and press the gear shift pedal downward to engage the low gear (1st gear).
2. Gradually increase the engine speed while slowly releasing the clutch lever, coordinating these two actions to ensure a smooth start.
3. When the motorcycle reaches a steady riding state, reduce the engine speed, disengage the clutch, and lift the gear shift pedal to engage the 2nd gear, and so on.

Things to pay attention to while driving:

1. Avoid unnecessary engine idling, and do not allow the engine to idle at high speeds, as this can severely damage the components.
2. Driving with the clutch partially engaged will quickly wear out the clutch plates.
3. If you feel the engine lacks power while climbing a slope, promptly shift to a lower gear.
4. While riding, especially when going downhill or at high speeds, do not use only the front brake or coast in neutral, and do not ride without holding the handlebars.
5. When stopping, reduce the throttle, disengage the clutch at the same time, and then apply the brakes.

Quick Shift System


The performance version of the motorcycle is equipped with a quick shift sensor, enabling you to upshift swiftly without using the clutch. As the throttle handle does not need to be closed, you can shift gears seamlessly and continuously.

- ▶ This function will not operate when upshifting with the throttle off.
- ▶ When starting the vehicle or powering it on, ensure the shift lever is in a free state and avoid operations such as pedal use, which may cause errors in the initial position self-learning of the quick shifting sensor. If quick shifting cannot be performed in any gear due to the malfunction of sensor self-learning, you can try restoring this function by powering the vehicle off and then power on again.
- ▶ To ensure the proper operation of the quick shift function, when using this feature to shift gears, make sure the shifting action is continuous and complete. Avoid incomplete shifting operations, as the ECU may exit the torque control function, resulting in a failed shift.

During daily maintenance, ensure the quick shift sensor remains clean (free of stains, sand, metal shavings, etc.) to maintain proper functionality.

Develop good riding habits during regular rides. After shifting, promptly move your foot to the pedal and avoid placing it above or below the shift lever to prevent accidental shifting. Practice this function regularly to become familiar with its features and fully leverage its capabilities.

Refueling

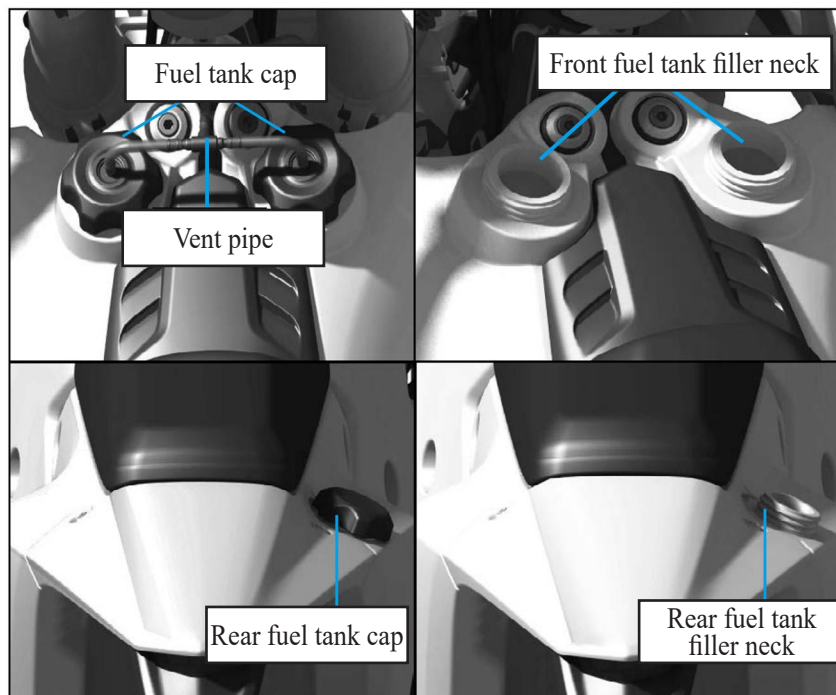

Your motorcycle is equipped with 3 fuel tanks, including 2 front fuel tanks and 1 rear fuel tank. The total capacity of the two front fuel tanks is 13.7 L, and the total capacity of the rear fuel tank is 15.7 L. Fuel must be added to each fuel tank separately. When adding fuel, fill the front fuel tank first, then the rear fuel tank. It is recommended to use 92# or higher unleaded gasoline.

Open the fuel tank cap:

Rotate counterclockwise to open the front or rear fuel tank cap.

Close the fuel tank cap:

Rotate the front or rear fuel tank cap clockwise to tighten it. Do not force it during the tightening process.

When refueling with the vent pipe twisted:

After stabilizing the motorcycle with the side stand, open the fuel tank cap to refuel. Once refueling is complete, close the fuel tank cap.

Avoid overfilling the fuel tank. Monitor the fuel level during refueling, and it is recommended to fill no more than 90% of the tank's capacity to prevent fuel expansion due to heat.

⚠ Warning

- When refueling, always do so outdoors, ensure the engine is turned off, stay away from heat sources, sparks, or open flames, and immediately wipe up any spills.

Maintenance

Please carefully read the “Maintenance” and “Maintenance Guidelines” sections before preparing for maintenance. Refer to “Technical Parameters” for maintenance data.

Maintenance.....	32
Maintenance Interval Table	33
Critical Component Torque Periodic Inspection Checklist	34
Maintenance Guidelines	35
Replacement Parts	36
Removal and Installation of Body Components.....	44
Engine Oil.....	46
Coolant.....	48
Brake.....	50
Side Stand.....	52
Drive Chain.....	53
Clutch.....	55
Accelerator.....	56
Front Shock Absorber Adjustment	57
Rear Shock Absorber Adjustment.....	60
Steering Damper Adjustment.....	65

Maintenance

The Importance of Maintenance

Always maintain your motorcycle in good condition, as it is essential for your safety, protecting your property, achieving optimal performance, preventing breakdowns, and reducing air pollution.

Maintenance is a crucial responsibility for motorcycle owners. Make sure to perform checks before each ride and conduct regular inspections according to the maintenance interval table.

Please follow these guidelines during maintenance:

- Extinguish the engine and remove the key.
- Park the motorcycle on a firm and level surface using the side stand, or support it with a maintenance stand.
- Wait for the engine, muffler, brakes, and other high-temperature components to cool down before starting operations; otherwise, it may cause burns.
- Start the engine under specified conditions and ensure it is in a well-ventilated environment.

▲ Warning

- Failure to perform regular maintenance before riding or to properly address faults may result in serious or fatal accidents.
- Please follow the inspection, maintenance recommendations, and maintenance interval table provided in the user manual.

Maintenance Interval Table

The vehicle should be serviced within the specified time frame. To ensure safety, only authorized KOVEMOTO Motorcycle service centers are qualified for the maintenance. The meanings of the symbols in the table are as follows:

I: Inspect, clean, adjust; R: Replace; A: Adjust; L: Lubricate

Maintenance Frequency Maintenance Item		Maintenance Interval						
		500~1000 km	Every 2,000 km	Every 4,000 km	Every 8,000 km	Every 1 years	Every 2 years	
※	Throttle control system	I	I	I	I	I	I	※ This item should be serviced by personnel from the authorized KOVEMOTO Motorcycle service centers. If the user has specialized tools, repair accessories, and repair skills, they can also perform the maintenance themselves. Repair instructions can be found in this Instruction Manual. ※ ※ To ensure safety, this project can only be serviced by authorized maintenance personnel from the authorized KOVEMOTO Motorcycle service centers. Special notes (when used for field or desert riding): 1. The air filter element requires daily cleaning or replacement. 2. The exhaust valve clearance should be inspected and adjusted every 30 hours of operation. 3. The intake valve clearance should be inspected and adjusted every 30 hours of operation. 4. The clutch should be inspected every 20 hours of operation. The shock absorber oil should be replaced every 20 hours of operation.
	Air filter element	I/R	I/R	I/R	R	R	R	
※※	Valve clearance				I			
※	Engine oil	R	R	R	R	R	R	
※	Oil filter element	R	I/R	R	R	R	R	
※	Timing chain tension	A	A	A	A	A	A	
	Transmission chain	I&L	I&L	I&L	I&L	I&L	I&L	
	Brake pad wear	I	I	I	I	I	I	
※	Brake system	I	I	I	I	I	I	
※	Clutch	I	I	I	I	I	I	
※	Fasteners	I	I	I	I	I	I	
※	Steering bearing	I	I	I	I	I	I	
※※	Deep groove ball bearing with buffer	I	I	I	I	I	I	
※	Front and rear wheel bearings	I	I	I	I	I	I	
	Battery			I	I	I	I	
※	Fuel system oil line/filter			I/R	R	R	R	
※	Spark plug			I	I	I	I	
※	Plain fork bearing				I&L	I&L	I&L	
※	Brake fluid					R	R	
	Coolant	I	I	I	I	I	R	
※	Front shock absorber oil				R			

Critical Component Torque Periodic Inspection Checklist

S/N	Name of Fastening Location	Recommended Inspection Material
1	Front and rear wheel axle tightening	Torque inspection is required during each maintenance cycle.
2	Upper and lower triple clamps tightening to secure the front shock absorber.	
3	Upper triple clamp and steering stem tightening	
4	Steering stem 4-slot nut tightening	
5	Handlebar lower clamp tightening	
6	Engine sprocket installation tightening	
7	Engine mounting fastening	
8	Rear shock absorber fastening	
9	Fastening of cradle bolts	
10	Front section of muffler with engine	
11	Front and rear brake caliper tightening	
12	Rear brake pump tightening	
13	Shift lever and adjustment rod end bearing tightening	
14	Brake pedal and adjusting lever end bearing tightening	
15	Entire brake line tightening	When cleaning the fuel lines, perform maintenance according to the specified torque requirements.
16	Fuel rail tightening	
17	Fuel pump tightening	During each maintenance cycle inspection or replacement, perform maintenance according to the specified torque and sealing method.
18	Front and rear brake discs tightening	
19	ABS ring gear	

Note: For torque cycle inspection items not specified in this Instruction Manual, the torque standards shall be followed as per our company's "Maintenance Manual".

Maintenance Guidelines

To ensure safety, you are responsible for performing a pre-ride inspection and making sure that any issues identified have been resolved. Pre-ride inspection is essential.

Inspection Items	Inspection Details
Handlebar	Smooth and flexible rotation, free from play or looseness
Brake system	Check its operating condition, and inspect the front and rear brake fluid levels and brake pad wear.
Fuel level	Sufficient fuel for the planned journey (refuel if necessary)
Accelerator	Check if it can open smoothly and close completely in all steering positions.
Clutch	Check its operating status and inspect the clutch pump fluid level
Wheels/tires	Check its usage status and tire pressure, and inflate if necessary.
Drive chain	Inspect its usage condition and sag, and adjust and lubricate if necessary.
Lighting, horn	Check the lighting system and horn to ensure they are functioning correctly.
Engine oil level	Add engine oil as needed and check for leaks.
Instrument Indicators	Check if all indicators on the instrument panel are functioning properly.

Replacement Parts

Battery

Inspect and replace the battery.

1. Before installing the battery, if the electrodes are found to be dirty, clean them thoroughly before installation; otherwise, poor contact may lead to malfunction.
2. If during use, the battery exhibits abnormal phenomena such as deformation, overheating, or smoking, stop using it immediately and have it inspected by an authorized KOVEMOTO Motorcycle service center.
3. If the battery is stored in a high-temperature or humid environment for an extended period, it may malfunction or experience a shortened lifespan. Before reuse, ensure the battery's appearance and functionality are normal.
4. If the vehicle fails to start, check whether the battery is functioning properly. If the battery is damaged, replace it immediately.
5. When installing the battery, ensure the battery terminal bolts are securely tightened.

If the battery is not used for an extended period, please note the following:

- To prevent over-discharge, the battery should be charged every two months.
- When the battery is not in use, it should be stored in a cool, dry environment, and the positive and negative terminals should be protected from short-circuiting.

Notes

- Improper handling of batteries may harm the environment and human health. Please dispose of used batteries in accordance with local environmental regulations.
- The addition of electrical appliances may cause battery drain and even electrical system malfunction.


Fuse

Fuses protect your motorcycle's electrical circuits. If any electrical components of your motorcycle stop functioning, inspect and replace the blown fuse.

Inspect and replace the fuses

Turn the ignition switch to the "⊗" (off) position, then remove and inspect the fuse. If the fuse is blown, replace it with a fuse of the same specification. Refer to the "Technical Parameters" section for the fuse Parameters.

If the fuse blows frequently, there may be a hidden issue with the electrical system. Please have it inspected by a authorized KOVEMOTO Motorcycle service center.

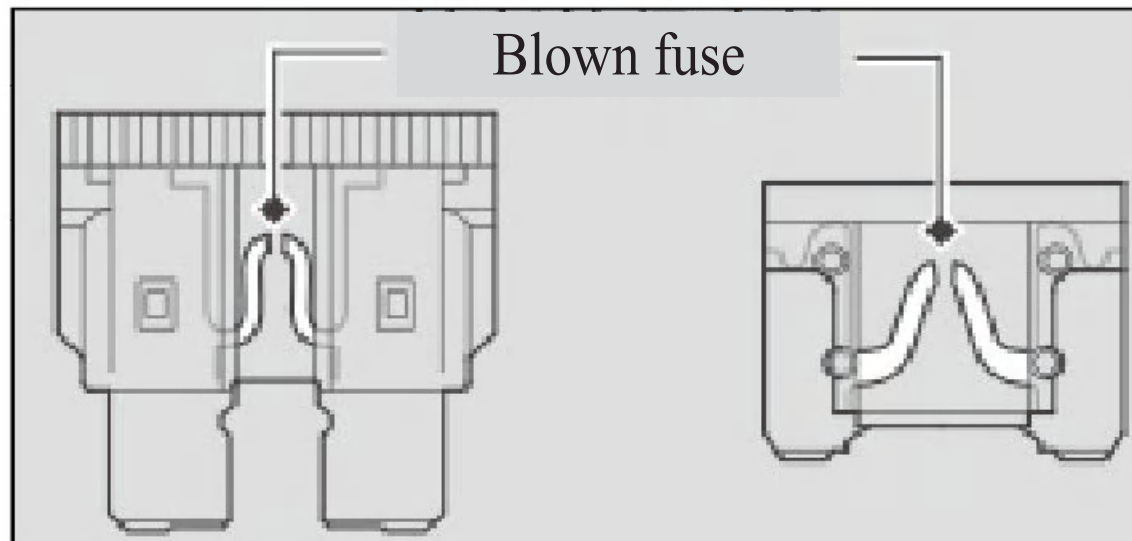

Notes

- Fuses must be replaced with ones of the same rating. Using a fuse with a higher rating increases the risk of damaging the electrical system and may pose a fire hazard.
- Installing non-KEVOMOTO electrical accessories can overload the electrical system, lead to battery discharge, and even damage the system.

Engine Oil

Engine oil consumption and degradation vary depending on riding conditions and usage duration. The higher the engine speed, the faster the oil consumption rate. When operating at high speeds or high RPM for extended periods, shorten the oil change interval. Regularly check the engine oil level and add the recommended engine oil if necessary.

When used in extreme temperatures, oil degrades more rapidly. Dirty or aged oil should be replaced promptly.

Choosing Engine Oil

The initial engine oil should be SN 10W-40, and the maintenance engine oil should be API-classified SN grade or higher.

Notes

- Brake fluid can damage plastic and painted surfaces. If spilled, wipe it off immediately and clean thoroughly.
- Recommended brake fluid: DOT4 or equivalent.
- Use coolant specifically designed for non-aluminum engines, as ordinary tap water or mineral water can cause corrosion.

Brake Fluid

Do not add or replace brake fluid except in an emergency.

Only use brake fluid that has been freshly taken from a sealed container. If you have added brake fluid, please have the brake system inspected by an authorized KOVE-MOTO Motorcycle service center as soon as possible.

Coolant


Only use the original undiluted KEVO Motorcycle premixed coolant, which offers superior protection against corrosion and overheating. Regularly check the coolant level and promptly add more if it falls below the minimum mark. The coolant has a freezing point of -40°C and a boiling point of 110°C .

Drive Chain

The drive chain must be regularly inspected and lubricated. If frequently ridden on poor road surfaces, at high speeds, or with repeated rapid acceleration, the chain should be checked more often.

If the drive chain does not operate smoothly, produces unusual noises, has damaged rollers or loose pins, or missing or bent seals, have the chain inspected by an authorized KOVEMOTO Motorcycle service center.

Also inspect the drive sprocket and driven sprocket. If either shows wear or damaged teeth, have them replaced by an authorized KOVEMOTO Motorcycle service center.

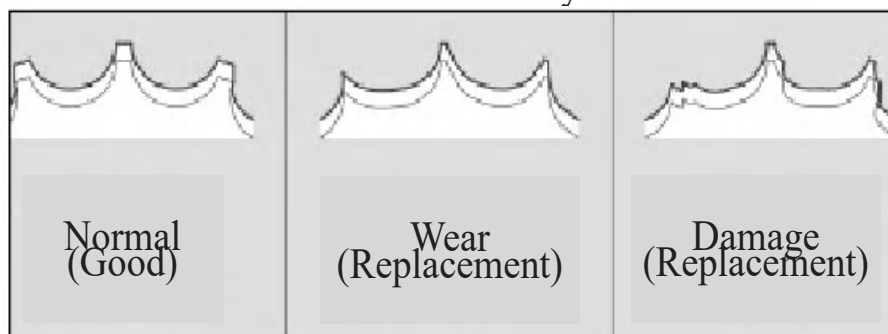

Notes


- Using a new drive chain on worn sprockets will accelerate chain wear; both the drive chain and sprockets should be replaced simultaneously.
- Recommended lubricant: Specialized lubricant for chain oil seals.

Cleaning and Lubricating

After checking the sag, clean the chain and sprockets while rotating the rear wheel using a dry cloth, a chain cleaner for sealed chains, or a neutral detergent. If the chain is dirty, use a soft brush. After cleaning, dry it and lubricate with the recommended chain oil.

Avoid using steam cleaners, high-pressure cleaners, wire brushes, volatile solvents like gasoline and benzene, scrubbing agents, chain cleaners, and lubricants that are not specifically designed for oil-sealed chains, as they may damage the chain oil seals.

Avoid getting lubricant on the brakes or tires, and refrain from using excessive lubricant to prevent it from splashing onto clothing or the motorcycle.

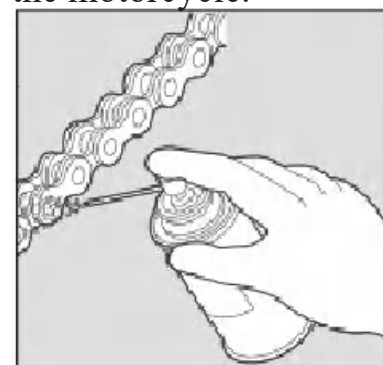

Tire (Inspection/Replacement)

Tire specifications

Front tire: 90/90-21

Rear tire: 140/80-18

Abnormal wear check


Inspect the tire's contact surface for any signs of abnormal wear.

Inspect the tread depth

Check the tread wear indicator marks; if the wear reaches the indicators, replace the tire immediately.

Check the damage

Inspect the tires for cuts, cracks, exposed fabric, tire cords, nails, or other foreign matters embedded in the sidewall tread, and also check for any abnormal bulges or swelling on the tire sidewall.

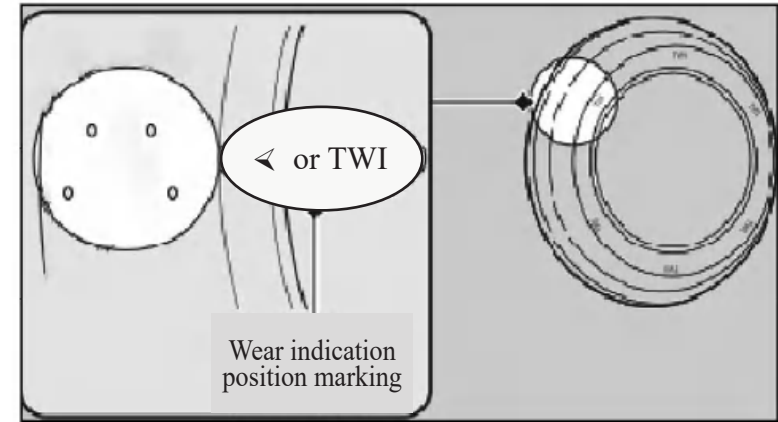

Whenever replacing tires, follow these guidelines:

- Use the recommended tires or equivalent products with the same size, structure, speed rating, and load capacity.
- After installing the tires, use the original KOVEMOTO motorcycle wheel balancer or equivalent equipment to balance and align the wheels.
- This motorcycle rim is designed for use with inner tubeless tires. Do not install Inner tube in tire yourself. If Inner tube is installed, it will rub against rim during rapid acceleration or braking, and the excessive heat will cause Inner tube to burst.

▲ Warning

- Using excessively worn or improperly inflated tires can lead to accidents, resulting in serious injuries or fatalities. Please follow the relevant tire inflation and maintenance guidelines provided in the Instruction Manual.
- Installing unsuitable tires can impair handling and stability, potentially causing accidents and even endangering lives.
- Always use the tire size and type recommended in this Instruction Manual.

Air Filter



This motorcycle is equipped with a sponge air filter element that requires regular cleaning or replacement. If you ride in dusty conditions, clean or replace the air filter every 3 days as needed, or daily in desert ambient.

Air filter maintenance requires special tools and mechanical expertise. Do not attempt to do maintenance on your own; please have it performed by an authorized KOVE-MOTO service center.

Tools


The onboard tools are embedded under seat cushion towards the back.

You can use the onboard tools to conduct some simple repairs, fine-tune, and replacement of parts.

- Double-ended screwdriver
- Double-ended wrench 8*10
- Double-ended wrench 12*14
- Double-ended internal torx wrench T25×T30
- 6mm Hexagon wrench
- Fish tail pliers

Removal and Installation of Body Components

Battery

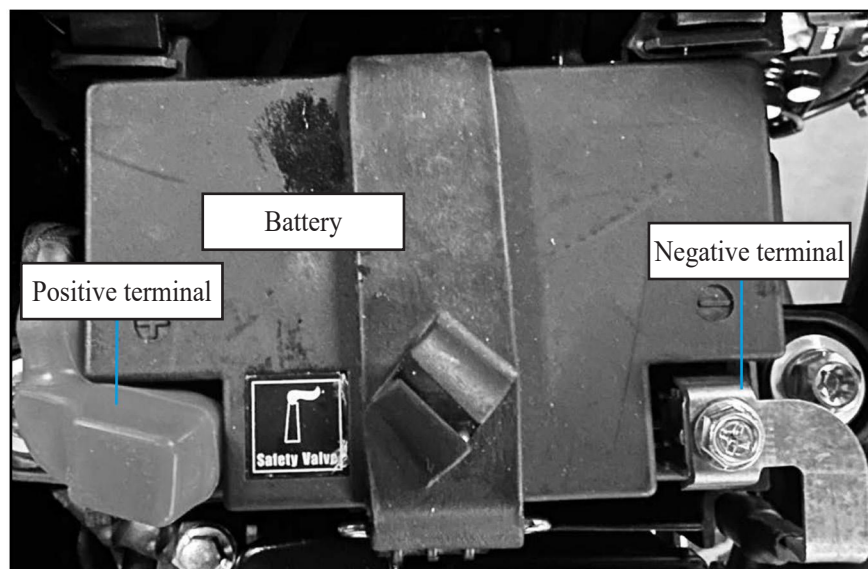

Disassembly

Make sure the ignition switch is turned to the "⊗" (off) position.

1. Remove the seat cushion.
2. Release the rubber strap from the back.
3. Disconnect the negative (-) terminal of the battery.
4. Disconnect the positive (+) terminal of the battery.
5. Remove the battery, being careful not to leave the bolts and nuts.

Installation

Install all parts in the reverse order of removal, ensuring to connect the positive terminal (+) first and the negative terminal (-) last; ensure that the bolts and nuts are tightened.

Seat Cushion



■ Disassembly

Pull the seat cushion lock cable backward, lift the rear end of the seat cushion upward to disengage it from the lock, and then remove the seat cushion diagonally upward, orienting backward

■ Installation


1. Insert the front and rear pins of the seat assembly into the frame slot respectively.
2. Align the seat cushion lock pin with the bore, press down on the rear part of the seat cushion to insert the lock pin into the bore of the seat cushion lock base, where it will be automatically secured by the locking latch. Gently pull upward to ensure the seat cushion is securely locked in place.
3. When the seat cushion is closed, the seat cushion will automatically lock.

Notes

- Ensure the seat pin is securely inserted into the frame slot; otherwise, the seat may not support your weight and could be damaged.

Engine Oil

Inspect and top up engine oil

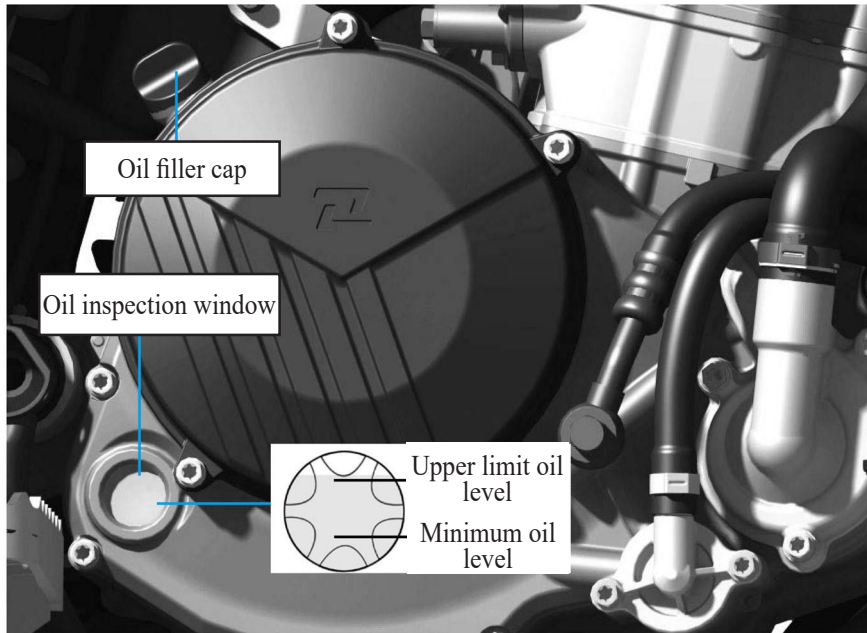

Check the engine oil

1. Let the engine idle for 3 - 5 minutes, turn the ignition switch to the "⊗" (OFF) position, and then wait for 2 - 3 minutes.
2. Place the motorcycle vertically upward on a stable and flat ground, check whether the oil level is between the upper and lower limit mark from the engine oil inspection window.

Add the engine oil


When the engine oil level is below or close to the lower limit mark, add the recommended engine oil.

1. Remove the engine oil filler cap, add the recommended oil to the upper mark of the oil level. Do not exceed the upper limit mark, and ensure that no foreign matters enter the engine oil filler. If there is any spillage, wipe it off immediately.
2. Reinstall and tighten the engine oil filler cap.

Notes


- Long-term skin contact with oil shall be avoided. Wash thoroughly after contact with oil.
- Overfilling or underfilling the oil will damage the engine. Do not mix oils of different brands and grades, as this will affect lubrication and clutch operation.
- The used engine oil and container are harmful to health and the environment. They cannot be disposed of as household waste and should be handled in accordance with local environmental regulations.

Replace the engine oil and the oil strainer

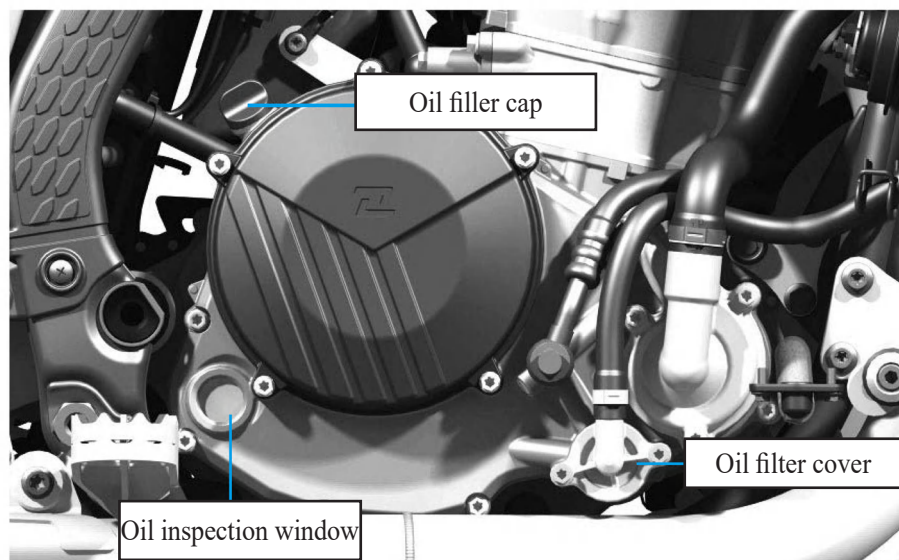

Replace the engine oil and the oil filter

Special tools are required to replace the engine oil and the oil filter. We recommend that the inspection and maintenance be completed by an authorized KOVEMOTO Motorcycle service center. Please refer to the “Maintenance Interval Table” for the maintenance interval of engine oil and secondary oil filter.

1.If the engine is cold, please idle for 3 - 5 minutes, turn the ignition switch to the “” (OFF) position, and then wait for another 2-3 minutes.

2.Park the motorcycle on a stable, level surface and place an oil drain pan beneath the drain bolt.

3.Remove the right windshield cover, engine oil filler neck cap, oil drain bolt, and seal washer, then drain the engine oil until it drips.

4.Remove the oil filter cap, take out the filter, and drain the remaining oil.

5.Replace the oil filter with a new one, install a new sealing washer on the oil filter cap, apply grease to the sealing washer, and securely install the oil filter cap (torque: 11 - 13 N·m).

6.Install a new sealing washer on the oil drain bolt and tighten the oil drain bolt (torque: 24 N·m).

7.Add the recommended genuine engine oil to the crankcase. After refilling, tighten the oil filler cap (torque: 11 - 13 N·m).

8.Check the engine oil for leakage.

When replacing the oil fine filter, the required oil volume is 1.6L.


When reassembling after disassembling the engine, the required oil level: 1.8 L

Notes

- Using the wrong engine oil and oil filter strainer can seriously damage the engine.
- Dispose of the engine oil and oil filter strainer at the appropriate recycling center.
- Use the specified KOVEMOTO original engine oil and oil filter.

Coolant


Inspect the coolant level

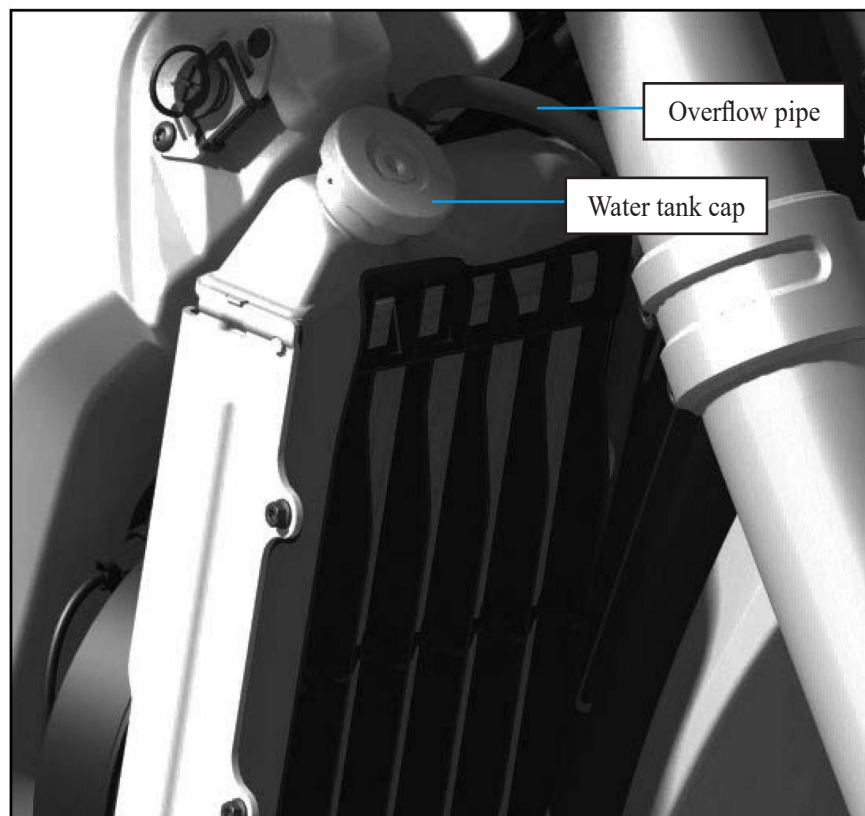

Check the coolant level in the reservoir when the engine is cool.

1. Park the motorcycle on a firm and flat level.
2. Keep the motorcycle upright.
3. Check that the coolant level in the water reservoir is between the overflow pipe and the water tank cap.
4. If the coolant level drops significantly or the reservoir is empty, there may be a serious leak. Please have it inspected by an authorized KOVEMOTO Motorcycle service center.

Add coolant

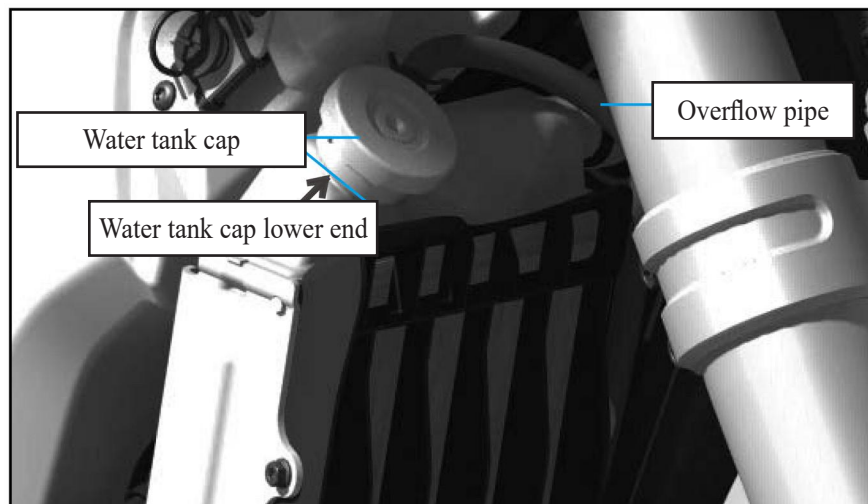


If the coolant level is below the position flush with the overflow pipe, add the recommended coolant until the level reaches the position flush with the lower end of the water tank cap. After completing the addition, reinstall the water tank cap.

Replace the coolant

Unless you possess the appropriate tools and qualified mechanical skills, please entrust the coolant replacement to the authorized KOVEMOTO Motorcycle service center.

Brake

Inspect the brake fluid

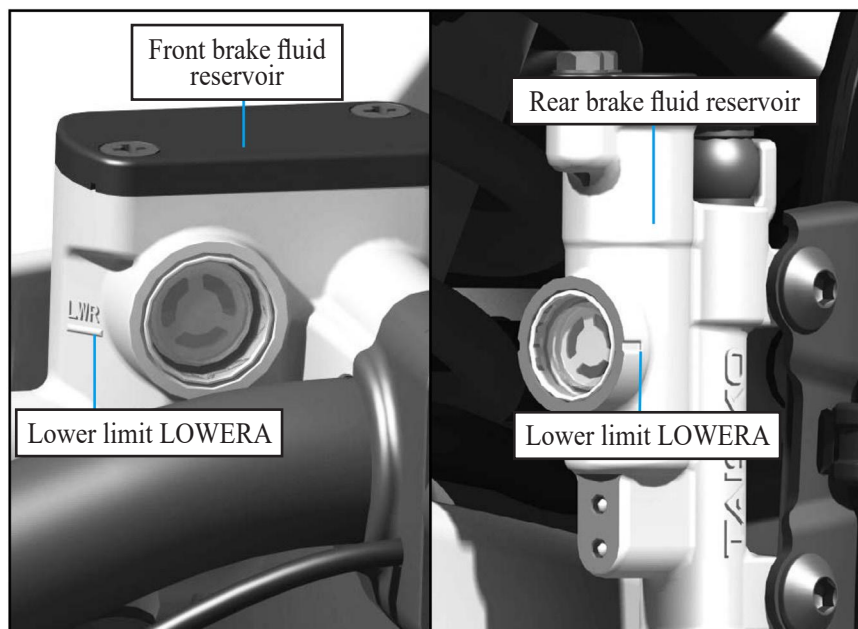

1. Place the motorcycle vertically on a firm and flat ground.
2. Check if the brake fluid reservoirs are horizontal.
3. Check if the brake fluid is visible in the inspection window. If the brake fluid level is below the lower limit of the inspection window, add it immediately.

If the brake fluid level in the oil cup is lower than the lower limit (LOWER) level mark or the free stroke of the brake rod and pedal is out of limit, users must check whether the brake pad is worn. If the brake pad is not worn, there may be leakage. Please have it repaired by an authorized KOVEMOTO Motorcycle service center.


Check the brake pads

Inspect the condition of the brake pad wear indicator. If the brake pad wears down to the indicator mark, it must be replaced.

Front Inspect the brake pad from beneath the brake caliper.
Brake pad lining thickness: 4.8mm (indicator mark indicates the wear limit)


Rear Inspect the brake pad from the right rear of the brake caliper.
Brake pad lining thickness: 6.4mm (indicator mark indicates the wear limit)

If necessary, have the brake pads replaced by an authorized KOVEMOTO Motorcycle service center (when the wear limit is reached, both the left and right brake pads must be replaced simultaneously).

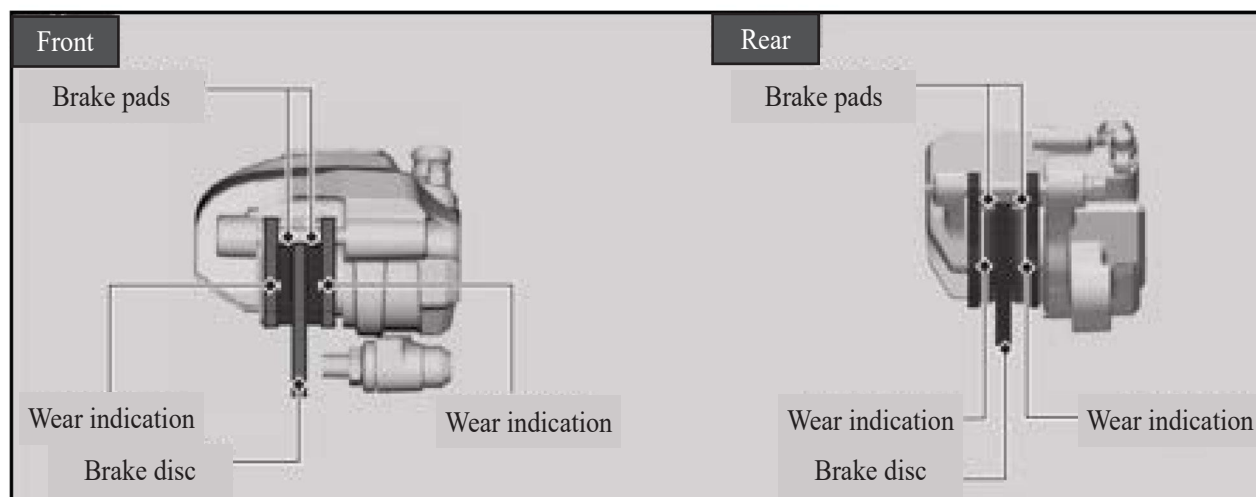

Side Stand

Check side stand

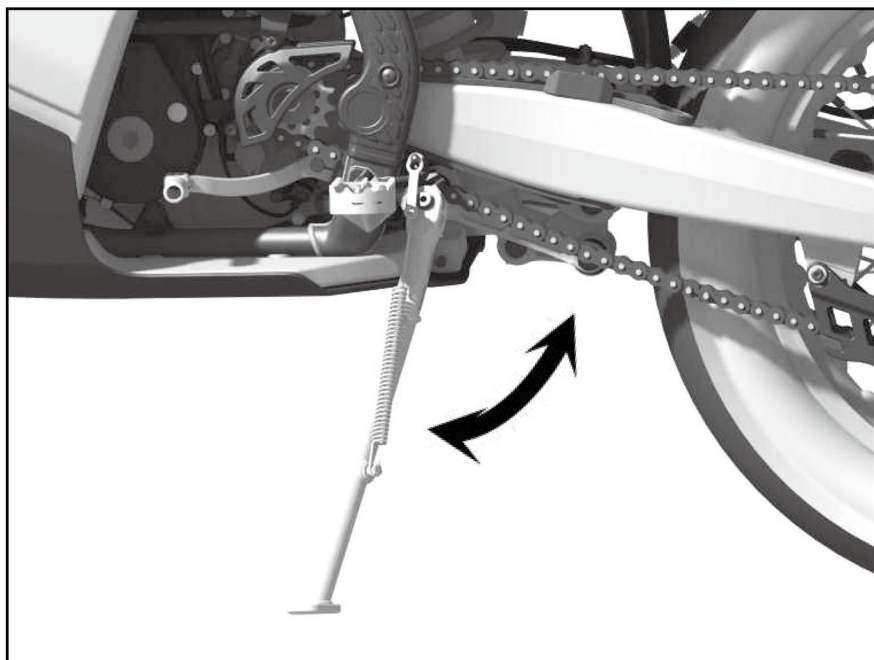

1. Check if the side stand operates smoothly. If the side stand is stuck or makes a squeaking noise, clean the pivot area and lubricate with clean grease.
2. Check the spring damages or inelasticity.

Drive Chain


Check the drive chain sag

Check the sag at various points along the chain. If the sag is inconsistent at any point, some links may be bent or kinked. Please have the chain inspected by an authorized KOVEMOTO motorcycle service center.

1. Put the transmission into neutral and turn off the engine.
2. Place the motorcycle vertically on a firm and flat ground.
3. Determine the chain sag by pushing the chain toward the swingarm in the area behind the chain guard.
4. Rotate the rear wheel forward and check if the chain operates smoothly.
5. Inspect the sprocket.
6. Clean and lubricate the drive chain.

Drive chain sag: 30-50 mm

If the sag exceeds 50mm, you must not continue riding the motorcycle.

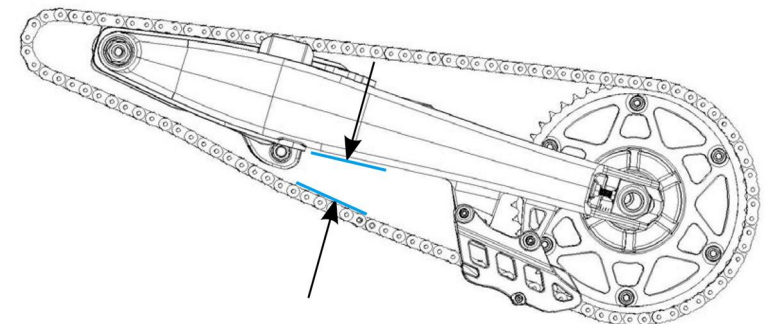


Sag Diagram

Notes

- When inspecting the drive chain sag, ensure that the upper section of the chain is properly tensioned.

Adjust the sag of the drive chain

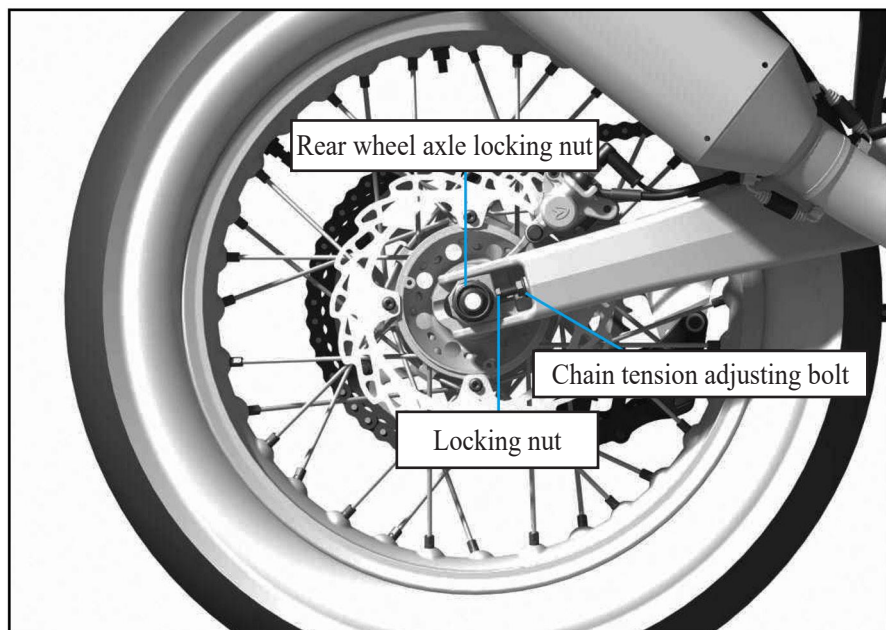


When adjusting the sag of the drive chain:

1. Put the transmission into neutral and turn off the engine.
2. Place the motorcycle vertically on a firm and flat ground.
3. Loosen the rear wheel axle nut.
4. Loosen the locking nut and chain tension adjusting bolt with an open-end wrench.
5. Rotate the chain tension adjusting bolt to adjust the chain tension. The chain tension adjustment range is 30-50mm (see sag diagram for details).
6. Push the chain in the direction of the plate fork at the middle of the upper part of the rear plate fork, to determine the reasonable sag of the chain.
7. Adjust the sag on both sides to the same scale line.

Notes

- When adjusting the drive chain sag, ensure that the upper section of the chain is taut.

Clutch

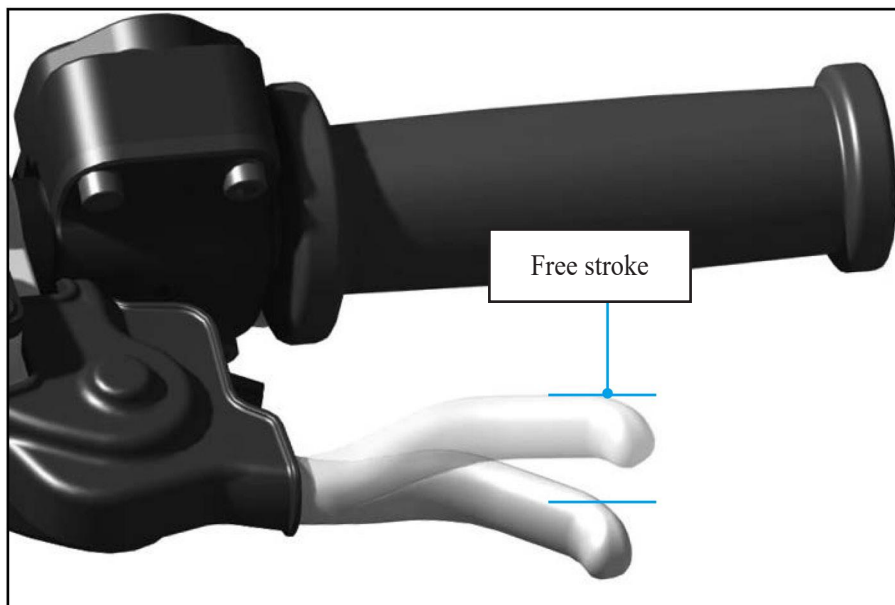

Check the clutch fluid level. If the level is low, add fluid. The clutch fluid is the same type as the brake fluid.

Notes

- Insufficient fluid may lead to clutch failure.


Accelerator

Inspect the throttle

With the engine off, check if the throttle can smoothly transition from fully closed to fully open in all handlebar positions and if the free play is correct.

If the throttle operation is not smooth, it automatically closes, or the cable is damaged, have it inspected by an authorized KOVEMOTO motorcycle service center.


Free play of the throttle handle flange: 2-6mm

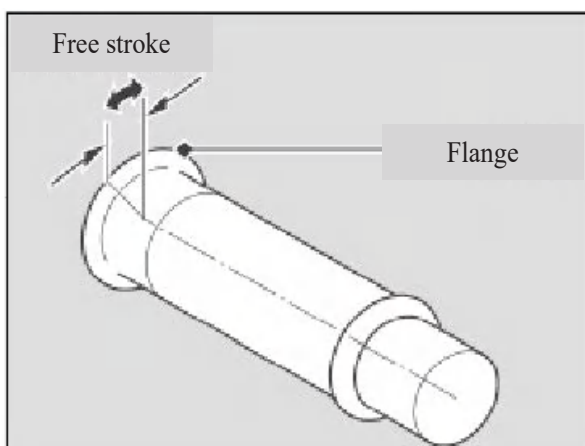

Notes

- Do not turn the adjuster beyond its natural limit.

Adjust the brake handle

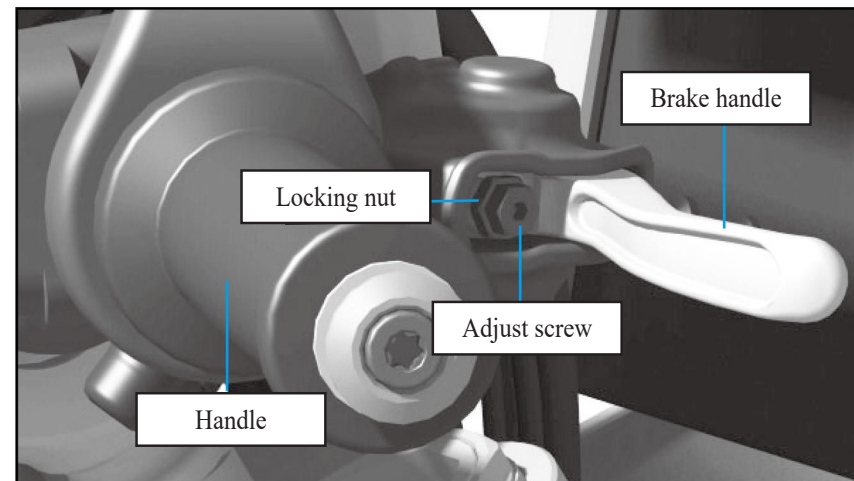


You can adjust the distance between the top of the brake handle and the handlebar grip.

Adjustment method

Remove the brake lever cover, use an 8mm wrench to loosen the lock nut first, rotate the adjustment nut clockwise to move the brake lever away from the handle, and rotate it counterclockwise to move the brake lever closer to the handle. After adjusting, tighten the internal locking nut. After adjustment, check whether the brake handle works correctly before riding.

Front Shock Absorber Adjustment

Compression damping adjustment

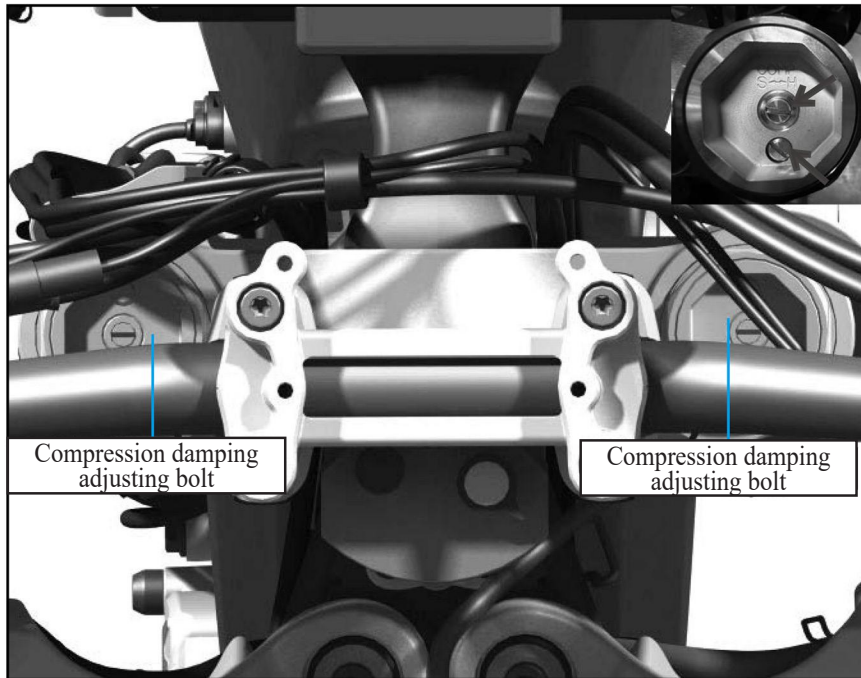

The adjustment of the compression damping affects the speed at which the front shock absorber compresses. The front shock absorber features 22 stages of compression damping. Each segment is a quarter turn. Turning the compression damping adjusting bolt one full turn will rotate the adjusting bolt by 4 segments.

The compression damping increases when the adjusting bolt is rotated clockwise (H), and the compression damping decreases when the adjusting bolt is rotated counterclockwise (S).

Set standard compression damping:


1. Rotate the compression damping adjusting bolt clockwise until it cannot be rotated.
2. Rotate the adjusting bolt in a counterclockwise direction. The standard compression damping is to rotate 10 segments counterclockwise from the hardest position (the position where a click sound is heard).

You can make adjustments based on your weight and riding conditions. Ensure that the adjusting bolt stops at the click position and both ends are set to the same level after each adjustment.

Notes

- Do not rotate the adjusting bolt beyond the specified position, as it may damage the adjustment mechanism. The adjusting torque shall not exceed 0.5N·m.


Inspection of front shock absorber

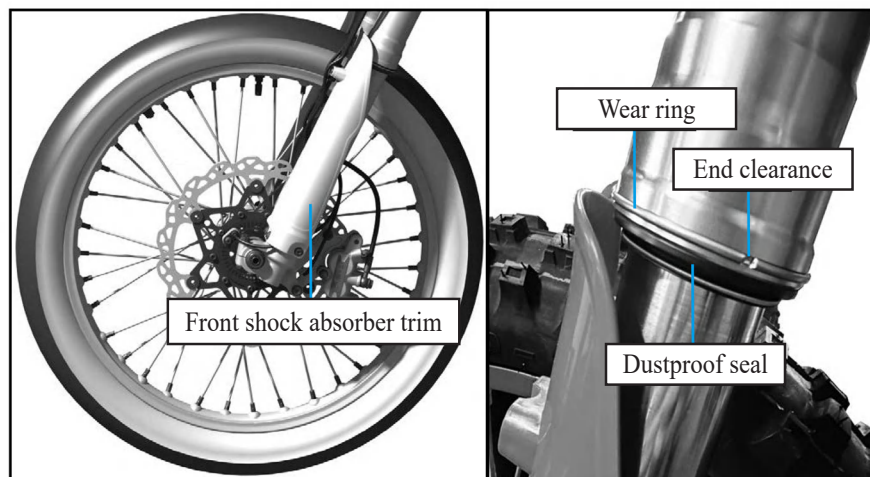

Check and clean all parts of the front shock absorber regularly to ensure optimum performance:

1. Check that the front shock absorber trim and dust seal are clean and that there is no soil or dirt on the front shock absorber.
2. Check for oil stains under the spring strut dust seal. If there are signs of oil leakage, replace the damaged dust seal and oil seal.
3. Check if the wear ring is worn or damaged. If the diameter of the wear ring is less than 1.7mm or flush with the outer cylinder, replace the wear ring. When replacing the wear ring, remove the bottom tube and install the wear ring with its end clearance facing the rear of the vehicle.
4. Pinch the hand brake lever and press the handlebar back and forth several times to check whether the front shock absorber rebounds smoothly.

Rebound damping adjustment

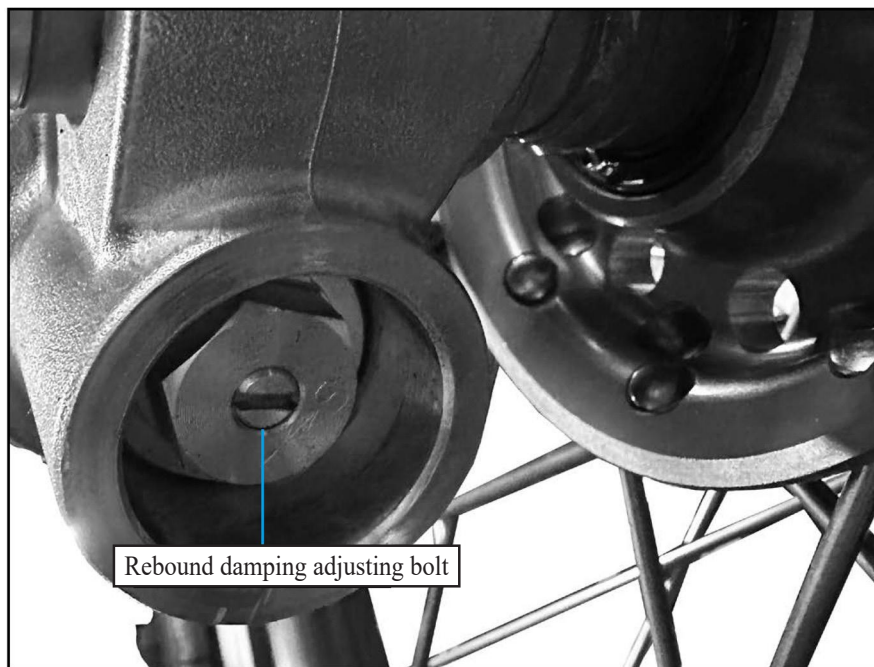

The adjustment of rebound damping will affect the rebound speed of the front shock absorber. The front shock absorber features 22 stages of rebound damping. Each segment is a quarter turn. Rotating the rebound damping adjusting bolt one full turn will advance the adjusting bolt by 4 stages.

Rotate the adjusting bolt clockwise (H) to decrease the rebound damping (harder).

Rotate the adjusting bolt counterclockwise (S) to decrease the rebound damping (softer).

Set the standard rebound damping:


1. Rotate the rebound damping adjusting bolt clockwise until it can no longer be turned.
2. Then rotate the rebound damping adjusting bolt counterclockwise until it cannot be rotated.

You can make adjustments based on your weight and riding conditions. Ensure that the adjusting bolt stops at the click position and both ends are set to the same level after each adjustment.

Notes

- Do not rotate the adjusting bolt beyond the specified position, as it may damage the adjustment mechanism. The adjusting torque shall not exceed 0.5N·m.
- By turning the adjusting bolt clockwise, both compression damping and rebound damping can be increased.

Rear Shock Absorber Adjustment

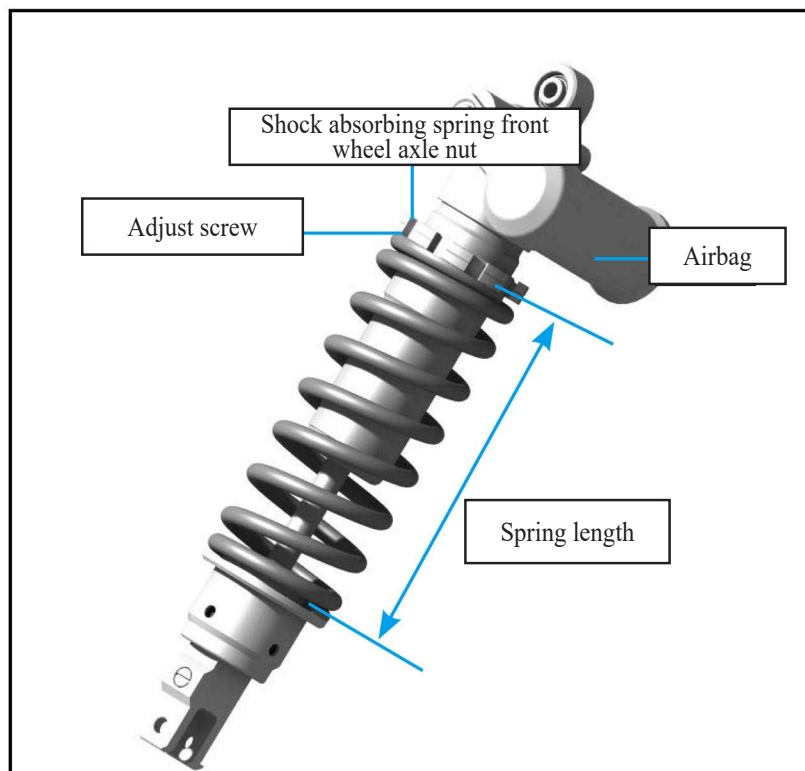

Spring preload adjustment

The spring preload shall be adjusted when the engine is cooled, and the shock absorber spring locking and adjusting nuts shall be rotated to adjust the spring preload.


Adjustment method:

1. Securely support your motorcycle with a maintenance bracket or a crane and lift the rear wheels off the ground.
2. Check whether the spring preload is within the standard length.
3. Loosen the shock absorber spring locking nut and rotate the adjusting nut. The spring length will change by 1.5 mm for each turn of the adjusting nut.
4. Make corresponding adjustments as needed.

After the adjustment is completed, hold the adjusting nut and tighten the shock absorber spring lock nut (torque: $44 \pm 3 \text{ N}\cdot\text{m}$).

The rear shock absorber assembly includes a shock air-bag containing high-pressure nitrogen. Do not attempt to disassemble, repair, or dispose of the device. Piercing or exposing it to flames may cause an explosion, resulting in serious injury. Repair or disposal should be completed by special repair shop of KOVEMOTO.

High-compression damping adjustment

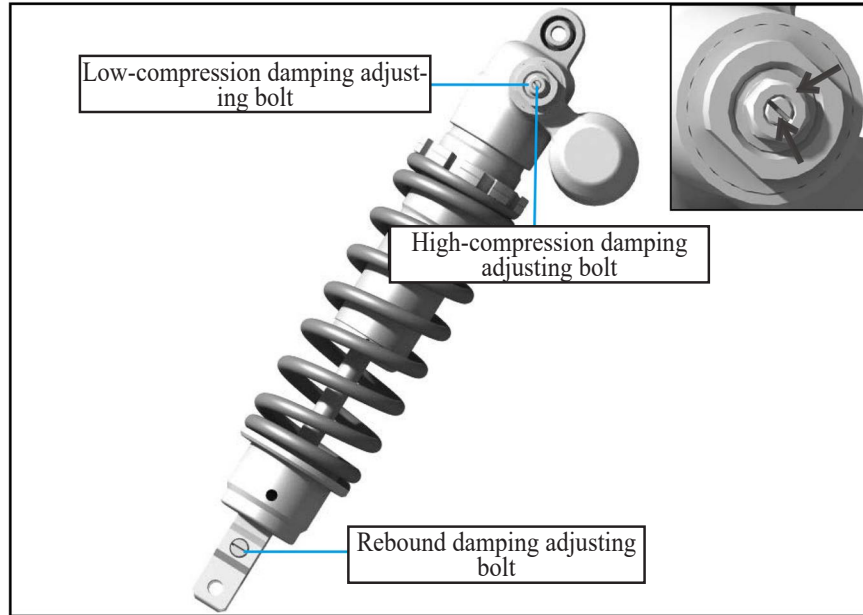

The compression damping can be adjusted separately for the bolt to conduct high-speed compression damping and low-speed compression damping. You can adjust it according to your weight and riding conditions.

When adjusting the compression damping adjusting bolt, always use a tool of the appropriate size to prevent damage.


High-speed compression damping adjustment

When it is necessary to adjust the compression damping of the shock absorber at high speed, adjust the hexagonal part of the compression damper, and adjust the stroke by about 4 turns. The compression damping increases after clockwise (H) adjustment, and the compression damping decreases after counterclockwise (S) adjustment.

Adjust to the standard position:

1. Rotate the adjusting bolt clockwise (H) until it cannot be rotated.
2. Rotate the adjusting bolt counterclockwise for 2 turns from the hardest position.

Low-compression damping adjustment

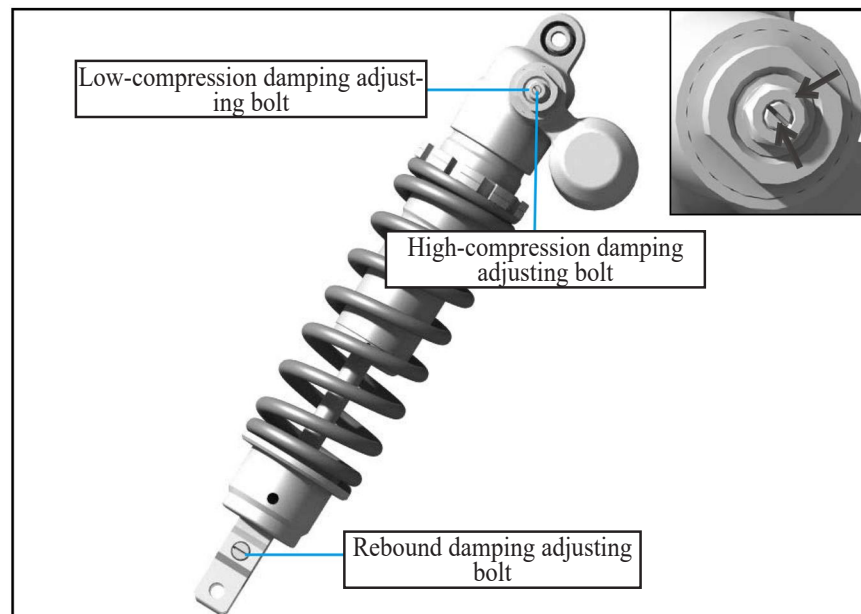

Low-speed compression damping adjustment

When it is necessary to adjust the compression damping of the shock absorber at high speed, adjust the center slot-bolt part of the compression damper. The adjustment range is 16 segments in total. Each segment is a quarter turn. The compression damping increases after clockwise (H) adjustment, and the compression damping decreases after counterclockwise (S) adjustment.


Adjust to the standard position:

1. Rotate the adjusting bolt clockwise (H) until it cannot be rotated.
2. Rotate the adjusting bolt for 8 segments counterclockwise from the hardest position (until a click sound is heard).

Notes

- The torque for compression damping adjustment must not exceed 0.5 N·m.

Rebound damping adjustment

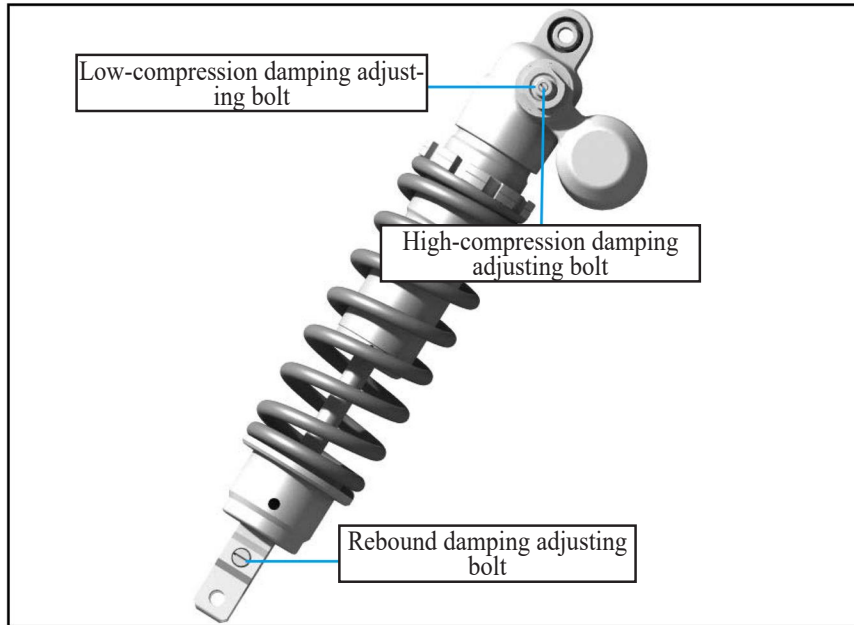

The rebound damping adjusting bolt is located at the lower left end of the rear shock absorber, with 24 clicks of rebound damping. Rotating the adjusting bolt clockwise (H) increases rebound damping while rotating it counterclockwise (S) reduces rebound damping.

Set the standard rebound damping:

1. Rotate the rebound damping adjusting bolt clockwise (H) until it cannot be rotated.
2. Rotate the adjuster in a counterclockwise (S) direction. The standard rebound damping is to rotate 10 clicks counterclockwise from the hardest position (where a click sound is heard).

Notes

- Gently rotate the adjusting bolt to prevent damage to the shock absorber.
- When adjusting compression damping or rebound damping, always use a properly sized tool to avoid damaging the device.
- Make sure that the adjusting bolt is firmly in the fixed position during each adjustment.
- The torque for rebound damping adjustment must not exceed 0.5 N·m.

Shock absorber inspection


Check and clean all parts of the shock absorber regularly to ensure optimum performance:

1. Check that the front shock absorber trim and dust seal are clean and that there is no soil or dirt on the front shock absorber.
2. Check for oil stains under the spring strut dust seal. If there are signs of oil leakage, replace the damaged dust seal and oil seal.
3. Pinch the hand brake lever and press the handlebar back and forth several times to check whether the front shock absorber rebounds smoothly.

Press the seat cushion several times to check whether the rear shock absorber works smoothly.

Steering Damper Adjustment

Foundation valve

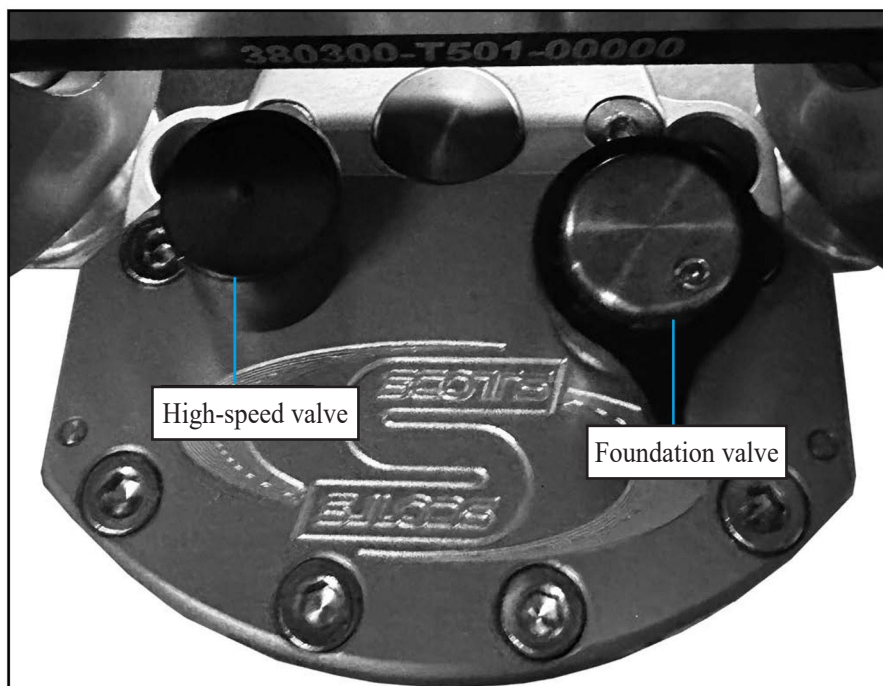

The foundation valve allows you to adjust the resistance you feel when rotating the steering handlebar from left to right. Rotating the knob clockwise increases the damper's stiffness, while rotating it counterclockwise softens the damper.

When rotating the foundation valve knob, you will feel a "click" with 8 clicks per full rotation.


The initial position of the foundation valve is set by rotating the valve clockwise until it stops, then rotating it counterclockwise 8 clicks (one full turn). We recommend adjusting it after riding for a period of time.

After rotating counterclockwise for more than 20 clicks, the foundation valve is nearly closed, while the high-speed valve still resists impact from resistance.

Notes

- Always check the foundation valve settings before each ride.

Foundation valve

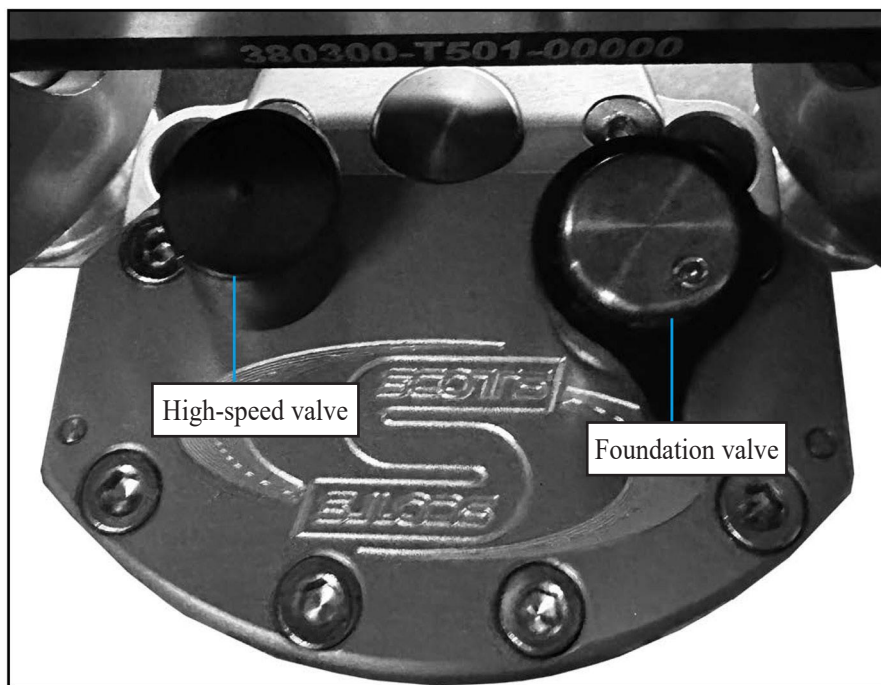

High-speed valve primarily withstand significant, accidental impact forces (such as hidden tree roots and potholes). The adjustment knob is located under the black cover, which fits tightly. You will need to remove the lid when making adjustments.

The factory default setting is that the high-speed valve is rotated one full turn from the fully rigid position. We recommend adjusting it only after riding for a period of time. Make adjustments in increments of 1/8 of a turn.

Rotating the high-speed valve clockwise (to the right) increases its sensitivity, meaning only a small force is needed for the valve to respond. Don't set this too "hard" as it may slow your steering response time.


The high-speed valve doesn't click; each position is a new setting, and adjustments are best made in 1/8-turn increments.

The performance of the high-speed valve is affected by the setting of the foundation valve. When the foundation valve is rotated clockwise (to the right), the regulating effect of the high-speed valve will gradually become less noticeable; conversely, when the foundation valve is adjusted counterclockwise (to the left), the effect of the high-speed valve will be more pronounced.

Do not test the high-speed valve when the motorcycle is on display at the exhibition stand.

Do not rotate the valve more than 3 turns from the fully closed position.


Screen sweep control valve

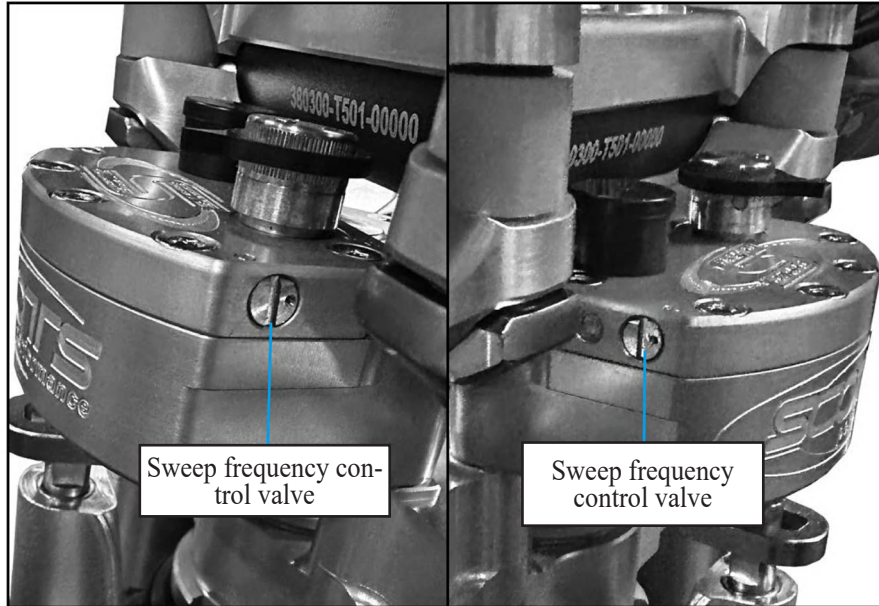


The sweep frequency control valve is located on both sides of the damper, and on the machined inclined surface on the side of the slot (concave side). They control the distance of resistance sweep, extending from the centerline to both sides, then the damper can move freely to the steering gear, enabling the motorcycle to turn easily during tight corners.

You can think of each sweep control as the face of a clock. If set at the 3 o'clock position, the valve on the right will face the front of the motorcycle, and the valve on the left will face the rear of the motorcycle. Partial damping is allowed.

At 12 o'clock, both valves are facing upward.
At 6 o'clock, both valves are facing downward.

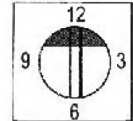

 For off-road riding, preset the sweep frequency control valves to the 12 o'clock position;
for road riding, preset them to the 6 o'clock position.



9 o'clock position: Damping = 34°;

12 o'clock position: Damping = 44°;

3 o'clock position: Damping = 54°;

6 o'clock position: Damping = 90°



Fault Handling

Please carefully review the “Maintenance” and “Technical Parameters” sections before servicing. For repair data, refer to the “Technical Parameters.”

Puncture	69
Removing the Wheel	70
Electrical Malfunction	74

Puncture

Repairing a flat tire or removing a wheel requires special tools and professional skills. We recommend leaving such maintenance tasks to a KOVEMOTO authorized repair shop. If you have performed overtightened tire repair, be sure to have tire inspected or tire replace KOVE authorized service center.

Perform emergency repairs using a tire repair kit

If your tire has a minor puncture, you can use an inner tubeless tire repair kit to perform emergency repairs.

Follow the instructions provided by the tire emergency repair kit. Riding a motorcycle with a temporarily repaired tire is very dangerous, and the speed should not exceed 50 kilometers per hour. Please have the tire replaced as soon as possible at an KOVEMOTO motorcycle repair shop.


▲ Warning

- Riding a motorcycle with a temporarily patched tire is extremely hazardous. If the patch fails, it could lead to an accident, causing severe injuries or fatalities.
- If you must ride a motorcycle with a temporarily repaired tire, ride cautiously and slowly, not exceeding 50 km/h, until the tire is replaced.

Removing The Wheel

If you need to remove the wheel to repair a punctured tire, follow the steps below. Be careful not to damage the wheel speed sensor and ABS ring gear when removing and installing the wheel.

Front wheel

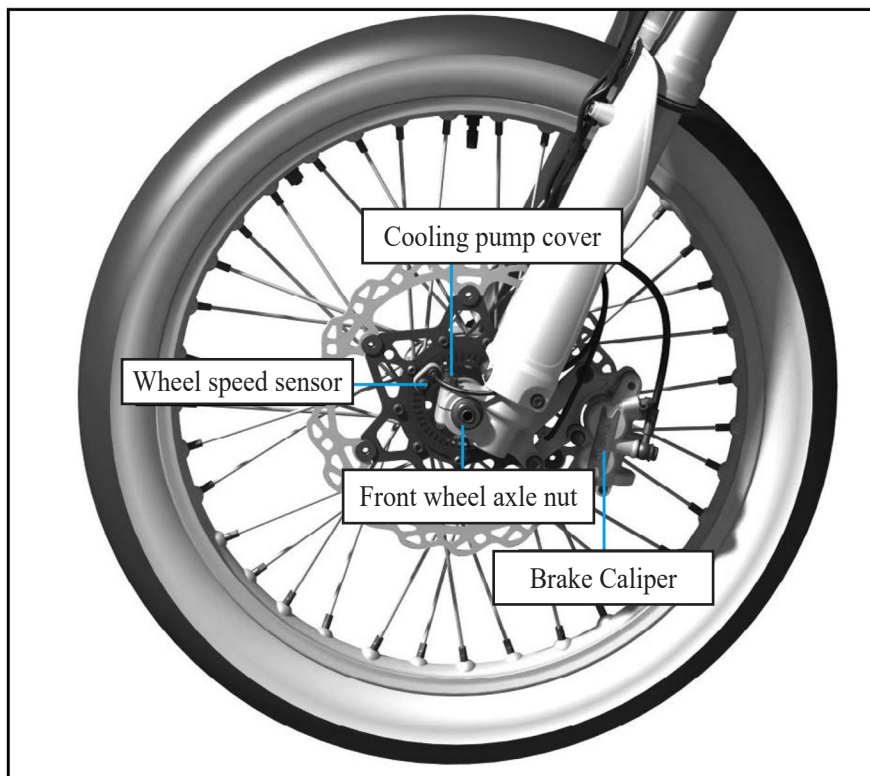

Disassemble:

1. Securely support your motorcycle with a maintenance bracket or a crane and lift the front wheels off the ground.
2. Remove the left brake caliper.
 - Support the brake caliper assembly well and do not hang it on the brake hose. Do not twist the brake hose.
 - Avoid getting lubricating oil, engine oil or dirt on the brake disc or brake pad.
 - When the brake caliper is removed, do not pull the brake handle.
 - Be careful to prevent the brake caliper from scratching the wheel during removal.
3. Loosen the wheel shaft locking bolt and front wheel axle.
4. Remove the front wheel axle and front wheel.


Installation

1. Clean the front axle and the mounting holes of the front shock absorber. Apply grease evenly around the groove between the primary and secondary lips of the front hub oil seal.
 2. Position the front wheel between the front shock absorbers, ensuring the brake disc is seated in the brake caliper, and take care not to damage the brake pads.
 3. Insert the front wheel axle through the front shock absorber and wheel hub from right to left, then tighten the front wheel axle nut (front wheel axle M16, torque: 88 N·m) and the locking bolts on both sides (front wheel axle locking bolt M8, torque: 22 N·m).
 4. Place the front wheel on the ground.
 5. Operate the hand brake lever several times, then shake the front fork up and down several times.
 6. Lift the front wheel off the ground again, and after releasing the brake lever, check if the wheel turns smoothly.
- If a torque wrench was not used during the installation process, please take it to an authorized KOVEMOTO motorcycle service center as soon as possible. Improper installation may result in reduced braking performance.

Notes

- When reinstalling the wheel or caliper, carefully position the brake disc between the brake pads to prevent scratching them.
- When installing the front wheel, first tighten the front axle, then secure the lock bolt on the right side of the front axle. The order of these steps cannot be reversed.

Rear wheel

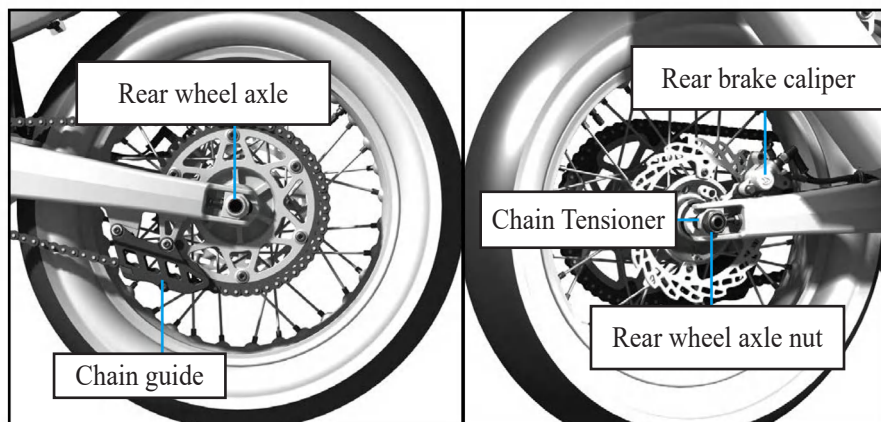

Disassembly

1. Park the motorcycle on a firm and flat level.
2. Firmly support your motorcycle with side stands or service bracket and lift the rear wheel off the ground.
3. Remove the rear axle nut.
4. Support the rear wheel and remove the rear axle.
5. Remove the drive chain from the drive sprocket.
6. Remove the rear wheel.
7. Remove the rear brake caliper assembly from the swingarm slot.

Notes

- Support the brake caliper assembly well and do not hang it on the brake hose. Do not twist the brake hose.
- Avoid getting lubricating oil, engine oil or dirt on the brake disc or brake pad.
- Do not press the brake pedal when the brake caliper is removed.
- Be careful to prevent the brake caliper from scratching the wheel during removal.

Installation

1. Check if the rear wheel bearing is damaged. If the bearing is damaged, replace the rear wheel bearing. Apply grease evenly in the groove between the primary and secondary lips of the oil seal.
2. Clean the rear axle and the rear swingarm mounting holes.
3. Install the rear brake caliper assembly into the rear swingarm slot.
4. Push the rear wheel into the rear swingarm while inserting the brake disc into the brake caliper, taking care not to damage the brake pads.
5. Reinstall the drive chain onto the drive sprocket.
6. Insert the rear axle and rotate the rear wheel to fully engage the drive chain with the drive sprocket.
7. Tighten the rear axle nut, torque: 128 N·m.
8. Check if the wheel rotates smooth.

If a torque wrench was not used during the installation process, please take it to an authorized KOVEMOTO motorcycle service center as soon as possible. Improper installation may result in reduced braking performance.

Notes

- When reinstalling the wheel or caliper, carefully position the brake disc between the brake pads to avoid scratches.

Relevant Information

Instrument, Controls and Other Functions	76
Motorcycle Care	77
Motorcycle Parking	80
Motorcycle Transport	80
You and Your Environment	81
Vehicle Identification Number, Engine Number, and Nameplate.....	82

Instrument, Controls and Other Functions

Ignition Switch, Engine OFF switch

Ignition switch

1. When parked, please set the ignition switch to the "⊗" or "🔒" position to avoid unnecessary battery drain. Excessive battery drain may prevent starting.
2. Do not turn the key while riding.

Engine OFF Switch

Do not use the engine OFF switch unless in an emergency. Doing so while riding will cause the engine to stop suddenly, making the ride unsafe.

Odometer, Trip Meter (Sub-total)

Odometer

When the reading exceeds 999,999, the display will lock at 999,999. Trip Meter

When the reading exceeds 999.9, the display will automatically reset to zero.

Motorcycle Care

Regular cleaning and polishing ensure a long motorcycle lifespan. A clean motorcycle makes it easier to spot potential faults. It is particularly noteworthy that anti-icing seawater and salt scattered on the road can accelerate corrosion. Be sure to clean the motorcycle thoroughly after driving on the coastal or above-mentioned road.

Cleaning

Wait for the engine, muffler, brakes, and other high-temperature components to cool before cleaning.

1. Thoroughly rinse the motorcycle with a low-pressure hose to remove loose dirt.
2. If necessary, use a sponge or soft towel dipped in mild detergent to remove dust and dirt.
3. Thoroughly rinse the motorcycle with ample clean water and dry it using a clean, soft cloth.
4. After drying the motorcycle, lubricate the moving parts, ensuring that no lubricant splashes onto the brakes or tires. Oil-contaminated brake discs, brake pads, brake drums, or brake shoes can significantly reduce braking performance and may lead to accidents.
5. After washing and drying the motorcycle, lubricate the drive chain promptly.
6. Waxing helps prevent corrosion.

Avoid using products containing strong detergents or chemical solvents, as these substances can damage the motorcycle's metal parts, paint, and plastic components. Do not wax the tires and brakes.

If your motorcycle has parts with a matte finish, avoid waxing these matte surfaces.

Cleaning Precautions

- Avoid using a high-pressure water jet:
 - ▶ High-pressure water jets can damage moving parts and electrical components, rendering them irreparable.
 - ▶ Moisture from the intake port may be drawn into the throttle body or enter the air filter.
- Avoid direct water rinsing of the muffler:
 - ▶ Water in the muffler may cause starting problems and rust. If detected, remove all traces and dirt immediately.
- Dry the brakes:
 - ▶ Water reduces braking performance. After washing, intermittently use the brakes at low speed, repeatedly pressing the brake pedal lightly to generate heat from friction, drying the water until braking efficiency is restored.
- Avoid direct water contact beneath the seat cushion:
 - ▶ Water entering under the seat cushion may damage electrical appliance parts.
- Avoid rinsing the air filter directly with water.
 - ▶ If the air filter gets wet, the engine may fail to start.
- Avoid direct water contact near the headlight:
 - ▶ After washing or riding in the rain, the internal lens of the headlight may temporarily fog up, but this does not affect its functionality. However, if you notice a significant accumulation of water or ice inside the lens, have it inspected by an authorized KOVEMOTO Motorcycle service center.
- Avoid waxing or polishing matte finishes:
 - ▶ Use sufficient water and a mild cleanser to clean matte paint surfaces, and dry them with a clean, soft cloth.

Aluminum Components

Aluminum corrodes when exposed to dirt, mud, or salt. Regularly clean aluminum components and follow these guidelines to prevent scratches:

- Avoid using stiff brushes, steel wool, or any abrasive cleaning materials.
- Do not drive or scrape against the curb.

Panel

Follow these guidelines to prevent scratches and damage:

- Gently clean with a sponge and sufficient water.
- Clean with diluted detergent and rinse thoroughly with ample water to remove stubborn stains.
- Avoid exposing the instrument panel and lamp covers to corrosive liquids like gasoline and brake fluid.

Motorcycle Parking

If you leave your motorcycle outdoors, you should consider using a full motorcycle cover. If you do not ride for an extended period of time, please follow these guidelines:

- Wash the motorcycle and wax all painted surfaces (excluding matte finishes), then apply anti-rust oil to all chrome parts.
- Lubricate the drive chain.
- Place the motorcycle on a maintenance stand and elevate it with wooden blocks to ensure both tires are off the ground.
- After rain, remove the body cover and dry it in a ventilated place.
- Remove the battery to avoid discharging.

Fully charge the battery and store it in a cool, well-ventilated area. If you leave the battery in place, disconnect the negative terminal to prevent discharge. Before reusing a stored motorcycle, inspect all items as specified in the maintenance interval table.

Motorcycle Transport

If you need to transport your motorcycle, use a motorcycle trailer, loading ramp, or flatbed truck equipped with a lifting platform, and secure it with motorcycle tie-down straps. Never attempt to tow a motorcycle with its wheels on the ground.

Notes

- Towing a motorcycle can severely damage the drivetrain.

You and Your Environment

Owning and riding a motorcycle is an enjoyable experience, but you must take responsibility for protecting the environment.

Select the appropriate detergent

Use biodegradable detergents when washing your motorcycle, and avoid sprays containing chlorofluorocarbons (CFCs) as they harm the protective ozone layer in the atmosphere.

Waste Recycling

Sort the oil and other toxic wastes into approved containers and send them to the recycling center. Call the local national public affairs or environmental service office for the recycling center in your area and the disposal method of non-recyclable wastes. Do not pour used engine oil into trash cans, sewers or ground, because the used oil, gasoline, coolant and cleaning solvent contain toxic substances, which will hurt cleaners, pollute drinking water, lakes, rivers and seas.

Vehicle Identification Number, Engine Number and Nameplate

When registering a motorcycle, you must provide the vehicle identification number and engine number. These unique identifiers are used to distinguish your motorcycle. When ordering replacement parts, ensure you record these numbers and store them in a secure location.

Vehicle Identification Number (VIN)

The VIN is engraved on the left side of the frame head beam



Engine Number

The engine number is engraved on the middle position of the left side of the engine transmission case.



Nameplate

The nameplate is affixed to the lower edge of the left side of the frame.



Technical Parameters

Vehicle-Related Parameters	84
Torque Parameters	86
Frame Tightening Torque.....	87

Vehicle-Related Parameters -1

Vehicle Model	New 450 Rally	Engine Model	ZEDT06 - A01
Overall length (mm)	2190	Cylinder diameter (mm) × Stroke (mm)	96.0 × 62.15
Overall width (mm)	845	Compression ratio	14:1
Overall height (mm)	1485	Maximum power (kw/r/min)	42/9500
Wheelbase (mm)	1490	Maximum torque (N·m/rpm)	49/7500
Wheelbase (mm)	/	Idle speed (rpm)	2200
Curb weight (kg)	128 (excluding fuel)	Cylinder capacity (mL)	449
Payload (kg)	150	Spark plug	NGK10A - 9S
Front tire specifications	90/90-21	Spark plug gap (mm)	0.8 - 0.9
Rear tire specifications	140/80-18	Valve clearance (mm)	0.11 - 0.16
Maximum speed (km/h)	180		0.22 - 0.28

Vehicle-Related Parameters - 2

Lubricating oil capacity (L)	1.4	Main fuse	20A
Fuel capacity (L)	34	Neutral indicator	LED lamp
Primary transmission ratio	1.949	Headlight	LED lamp
1st gear	2.846	Front position lamp	LED lamp
2nd gear	2.000	Rear position lamp/Brake lamp	LED lamp
3rd gear	1.579	Front turn signal	LED lamp
4th gear	1.318	Rear turn signal	LED lamp
5th gear	1.200	Rear license plate lamp	LED lamp
6th gear	1.111	Turn indicator light	LED lamp
Final transmission ratio	3.214	Instrument indicator light	LCD lamp
Battery	12V 4Ah (Lithium-ion Battery)	Ignition mode	ECU controls ignition

Torque Parameters

Fastener Type	Torque	Fastener Type	Torque
5mm bolt and nut	6	6mm Screw	8
6mm bolt and nut	12	6mm flange bolt (8mm head, small flange)	10
8mm bolt and nut	22	6mm flange bolt (8mm head, large flange)	12
10mm bolt and nut	60	6mm flange bolt (10mm head) and nuts	12
12mm bolt and nut	80	8mm flange bolt and nut	22
5mm screw	5	/	/

Notes

- Except for the specified torque, the standard torque values in the above table apply to this vehicle.

Vehicle Body Bolt Torque Value

Item	Thread Diameter (mm)	Torque (N·m)	Notes
Self-tapping screw connecting taillight assembly to rear tailgate	ST4.8	3	
Philips semi-circular head screw connecting left handlebar switch to steering handlebar	M4	5	
Hexagon socket pan head screw connecting roadbook assembly to roadbook mounting bracket	M5	8	
Hexagon socket pan head screw connecting roadbook assembly to roadbook mounting bracket	M5	8	
Philips pan head screw connecting ECU bracket to rear fuel tank	M5	5	
Philips pan head screw connecting oil pipe clamp to swingarm	M5	5	
Philips pan head screw connecting left frame trim to frame	M5	5	
Philips pan head screw connecting right frame trim to frame	M5	5	
Hex self-locking nut for chain guide connection	M5	4	
Hex self-locking nut connecting instrument to roadbook bracket	M5	4	
Hexalobular hexagon flange bolt connecting radiator-left and radiator grille-left	M5	4	
Hexalobular hexagon flange bolt connecting radiator-right and radiator grille-right	M5	4	
Hexalobular hexagon flange bolt connecting side stand hook bracket to rear fuel tank	M5	4	Apply grease to the smooth portion of the rod
Hexalobular hexagon flange bolt connecting oil pipe connectors of fuel pipe 3/fuel pipe 4 to fuel tank	M5	5	
Hexalobular hexagon flange bolt connecting front brake hose pressure plate to front shock absorber trim-left	M5	5	
Hexalobular hexagon flange bolt connecting headlight mounting bracket to headlight	M5	5	
Hexalobular hexagon flange bolt connecting rear brake pedal to brake rockerarm	M5	3	Apply adhesive to the threads
Hexalobular hexagon flange bolt connecting quick shifting sensor to engine	M5	5	
Hexalobular hexagon flange bolt connecting chain guide to wear blocks	M5	5	
Hexalobular pan head screw connecting fuel tank front protector bracket to front fuel tank (left)	M5	5	

Item	Thread Diameter (mm)	Torque (N·m)	Notes
Hexalobular pan head screw connecting fuel tank front protector bracket to front fuel tank (right)	M5	5	
Hexalobular pan head screw connecting front ABS ring gear to front disc brake	M5	4	Apply adhesive to the threads
Hexalobular pan head step screw connecting fuel tank front trim-left to front fender	M5	3	
Hexalobular pan head step screw connecting fuel tank front trim-right to front windshield	M5	3	
Hexalobular pan head step screw connecting fuel pump to front fuel tank left/rear fuel tank	M5	5	
Hexalobular step bolt connecting front headlight housing to headlight mounting bracket	M5	3	
Hexalobular hexagon flange bolt connecting OBD adapter bracket to rear fuel tank	M5	4	
Philips pan head screw connecting chain clip to swingarm	M6	8	
Bleed screw connecting rear brake hose to rear brake caliper	M6	4	
Hexalobular hexagon flange bolt connecting roadbook bracket to head cowl bracket	M6	10	
Hexalobular hexagon flange bolt connecting rear wheel splash guard to rear fuel tank	M6	8	
Hexalobular hexagon flange bolt connecting engine lower protector to water reservoir	M6	8	
Hexalobular hexagon flange bolt connecting front disc brake to front wheel hub	M6	12	Apply adhesive to the threads
Hexalobular hexagon flange bolt connecting horn to frame	M6	8	
Hexalobular socket hexagon flange bolt connecting main cable ground to rear bracket of tool box	M6	8	
Hexalobular hexagon flange bolt connecting rear fuel tank lower bracket to rear fuel tank	M6	10	
Hexalobular hexagon flange bolt connecting rear disc brake to rear wheel hub	M6	12	Apply adhesive to the threads
Hexalobular hexagon flange bolt connecting front wheel speed sensor to front wheel bushing-left	M6	8	
Hexalobular hexagon flange bolt connecting steering damper adjuster to frame	M6	10	
Hexalobular hexagon flange bolt connecting frame to chain slider	M6	8	
Hexalobular hexagon flange bolt connecting front fender to lower connecting plate	M6	8	
Hexalobular hexagon flange bolt connecting steering damper to upper bracket	M6	12	Apply adhesive to the threads
Hexalobular hexagon flange bolt connecting air filter housing to engine upper suspension	M6	8	

Item	Thread Diameter (mm)	Torque (N·m)	Notes
Hexalobular hexagon flange bolt connecting electrical mounting bracket to frame	M6	10	
Hexalobular hexagon flange bolt connecting shift rockerarm	M6	10	
Hexalobular hexagon flange bolt connecting oil cooler to frame	M6	10	
Hexalobular hexagon flange bolt connecting headlight mounting bracket to head cowl bracket	M6	10	
Hexalobular hexagon flange bolt connecting regulating rectifier to electrical mounting bracket	M6	10	
Hexalobular hexagon flange bolt connecting radiator-left to frame	M6	10	
Hexalobular hexagon flange bolt connecting radiator- right to frame	M6	10	
Hexalobular hexagon flange bolt connecting engine lower protector to frame	M6	8	
Hexalobular hexagon flange bolt connecting ignition coil to engine	M6	8	
Hexalobular hexagon flange bolt connecting engine front sprocket cover to engine	M6	8	
Hexalobular flange bolt connecting the chain guide to the swingarm	M6	8	
Hexalobular round head cap screw connecting front brake hose clip to upper/lower connecting plate	M6	8	
Hexalobular round head cap screw connecting fuel injector cap to throttle valve	M6	8	
Hexalobular round head cap screw connecting oiler mounting base	M6	8	
Hexalobular countersunk head screw connecting rear fuel tank shield to rear fuel tank	M6	8	
M6×20 hexalobular countersunk screw for mounting the seat cushion lock and rear fuel tank	M6	8	
Hexalobular pan head step screw connecting front shock absorber trim-left to front shock absorber-left	M6	5	
Hexalobular pan head step screw connecting front shock absorber trim-right to front shock absorber-right	M6	5	
Hexalobular pan head screw connecting muffler mounting bracket to rear fuel tank	M6	8	
Hexalobular pan head screw connecting rear brake pump assembly to frame	M6	8	
Hexalobular pan head step screw connecting rear fuel tank to tailgate	M6	8	
Hexalobular pan head step screw connecting tool box to frame	M6	8	
Hexalobular pan head step screw connecting right-hand windshield to front brake pump assembly	M6	8	

Item	Thread Diameter (mm)	Torque (N·m)	Notes
Hexalobular pan head step screw connecting left-hand windshield to clutch lever assembly	M6	8	
Hexalobular pan head step screw connecting rear fuel tank to tailgate	M6	8	
Rubber bolt for connecting head cowl bracket	M6	6	
Hexalobular hexagon flange bolt connecting head cowl bracket to frame	M7	18	Apply adhesive to the threads
Hexalobular hexagon flange bolt connecting speed limiter switch and clutch pump assembly	M7	18	
Hexalobular hexagon flange bolt connecting handlebar switch-right to front brake pump	M7	18	
Rear fuel tank mounting bolt connecting rear fuel tank to frame	M8	22	Apply adhesive to the threads
Brake rockerarm connecting brake rockerarm to frame	M8	25	Apply grease to the smooth rod, and apply sealant to the threaded area
Hexagon flange nut connecting muffler front section assembly to engine	M8	22	
Hexalobular hexagon flange bolt connecting engine upper suspension - left to frame	M8	35	Apply adhesive to the threads
Hexalobular hexagon flange bolt connecting engine upper suspension - right to frame	M8	35	Apply adhesive to the threads
Hexalobular hexagon flange bolt connecting engine front suspension - left to frame	M8	35	
Hexalobular hexagon flange bolt connecting engine front suspension - right to frame	M8	35	
Hexalobular hexagon flange bolt connecting front fuel tank mounting bracket to frame	M8	22	
Hexalobular hexagon flange bolt connecting front shock absorber - left to the front wheel axle	M8	22	
Hexalobular hexagon flange bolt connecting front shock absorber - right to the front wheel axle	M8	22	
Hexalobular hexagon flange bolt connecting upper bracket to front shock absorber - left/right	M8	20 apply twice	
Hexalobular hexagon flange bolt connecting muffler rear section and muffler mounting bracket	M8	22	
Hexalobular hexagon flange bolt connecting muffler front section to frame	M8	22	
Hexalobular hexagon flange bolt connecting lower connecting plate to front shock absorber - left/right	M8	16 apply twice	
Hexalobular hexagon flange bolt connecting front shock absorber - left to front caliper bracket	M8	25	Apply adhesive to the threads

Item	Thread Diameter (mm)	Torque (N·m)	Notes
Hexalobular round head cap screw connecting front fuel tank (left) to frame	M8	22	
Hexalobular round head cap screw connecting front fuel tank (right) to frame	M8	22	
Hexalobular round head cap screw connecting front fuel tank (left) to engine upper suspension - left	M8	22	
Hexalobular round head cap screw connecting front fuel tank (right) to engine upper suspension - right	M8	22	
Hexalobular round head cap screw connecting front fuel tank (left) to front fuel tank bracket	M8	22	
Hexalobular round head cap screw connecting front fuel tank (right) to front fuel tank bracket	M8	22	
Hexalobular round head cap screw connecting steering handlebar upper socket to lower socket	M8	22	
Hexalobular round head cap screw connecting left and right windshields and left and right handlebar grip	M8	25	
Hexalobular countersunk head bolt connecting buffer body to rear sprocket	M8	50	Apply adhesive to the threads
Rubber bolt connecting front fuel tank bracket to frame (left 1/right 1)	M8	15	
Hexalobular hexagon flange bolt connecting front fuel tank bracket to rubber bolts (left 1/right 1)	M8	15	
Hexalobular button head bolt connecting air filter intake grille to front fuel tank (left)	M8	22	
Oil passing bolt connecting front brake hose to front brake caliper combination	M10	22	
Oil passing bolt connecting rear brake hose to rear brake pump	M10	22	
Flat head bolt connecting triangular cradle to rear shock absorber	M10	45	
Hex flange self-locking nut connecting engine to engine front suspension at one point and to frame at two points	M10	60	
Hex flange self-locking nut connecting side stand to frame	M10	22	
Hex flange self-locking nut connecting frame to U swingarm	M10	60	
Hex flange self-locking nut connecting tri-cradle to rear shock absorber	M10	44	
Hexalobular hexagon flange bolt connecting engine upper suspension - left/right to engine	M10	60	
Hexalobular hexagon flange bolt connecting steering handlebar lower socket to upper bracket	M10	34	Apply adhesive to the threads
Hexalobular hexagon flange bolt connecting rear shock absorber to frame	M10	44	

Item	Thread Diameter (mm)	Torque (N·m)	Notes
Hexalobular hexagon flange bolt connecting frame to engine	M10	60	
Hexalobular hexagon flange bolt connecting engine front suspension - left to engine, frame and engine	M10	60	
Flat-head bolt connecting swingarm to triangular cradle	M12	60	
Flat-head bolt connecting U swingarm to triangular cradle	M12	60	
Hex flange self-locking nut connecting U swingarm/swingarm to triangular cradle	M12	55	
Hex flange bolt connecting upper bracket to steering stem	M14	128	Apply grease to the smooth portion of the rod
Hex nut connecting engine upper suspension - left to front fuel tank (left)	M16	35	
Hex nut engine connecting engine upper suspension - right to front fuel tank (right)	M16	35	
Hex nut connecting front fuel tank bracket to front fuel tank (left)	M16	35	
Hex nut connecting front fuel tank bracket to front fuel tank (right)	M16	35	
Front wheel axle locking nut	M16	88	
Front wheel axle connecting nut for locking swingarm axle	M16	88	
Rear wheel axle connecting nut	M22	128	
8-slot adjusting nut connecting upper bracket to steering stem	M25	When loosening to 45 N·m, then torque to 15 N·m and back off a 1/4 turn	