

SERVICE SCHEDULE (450 Rally regular)

The motorcycle should be maintained within the specified time, and for safety, it should only be serviced by the KOVE repair shop.

The symbols in the table have the following meanings:

I: Inspection, cleaning, adjustment R: replacement A: adjustment L: lubrication

ITEM	INITIAL	ODOMETER READING					PERIODIC INTERVAL	
	500 km (300 mi)	2500 km (1500 mi)	4500 km (2700 mi)	6500 km (3900 mi)	8500 km (5100 mi)	12 months	24 months	
※ Throttle operational system	I	I	I	I	I	I	I	
Air filter	I/R	I/R	I/R	I/R	R	R	R	
※※ Valve clearance					I			
※ Engine oil	R	R	R	R	R	R	R	
※ Oil filter	R	I/R	R	I/R	R	R	R	
※ Timing chain tension	I	I	I	I	I	I	I	
Driving chain tension	I & L	I & L	I & L	I & L	I & L	I & L	I & L	
Brake pads wear	I	I	I	I	I	I	I	
※ Brake system	I	I	I	I	I	I	I	
※ Clutch	I	I	I	I	I	I	I	
※ Fastener	I	I	I	I	I	I	I	
※ Directional bearing	I	I	I	I	I	I	I	
※※ Rear spoke bearing	I	I	I	I	I	I	I	
※ Front and rear wheel bearing	I	I	I	I	I	I	I	
Battery			I		I	I	I	
※ Fuel pipe and filter			I/R		R	R	R	
※ Spark plug			I		I	I	I	
※ Swingarm bearing					I & L	I & L	I & L	
※ Brake fluid						R	R	
Coolant	I	I	I	I	I	I	R	
※ Suspension hydraulic oil					R			

From 10500 km (6300 mi), repeat the maintenance intervals starting from 2500 km (1500 mi).

*: The item is repaired by the personnel of the special repair store of KOVE repair shop. If the user has special tools, repair parts and repair ability, he can also repair by himself, and the repair knowledge can refer to this instruction manual.

** : To ensure safety, this project can only be repaired by the personnel of the special repair store of KOVE.

Attention (for cross-country race or desert) :

1. Air filter clean or change everyday.
2. Valve clearance check and adjust every 30 hours.
3. Clutch check every 20 hours.
5. Suspension fluid change every 20 hours.

SERVICE SCHEDULE (800X, 450RR, 321, 250RR, 125R)

The motorcycle should be maintained within the specified time, and for safety, it should only be serviced by the KOVE repair shop.

The symbols in the table have the following meanings:

I: Inspection, cleaning, adjustment R: replacement A: adjustment L: lubrication

ITEM		INITIAL	ODOMETER READING					PERIODIC INTERVAL	
		1000 km (600 mi)	6000 km (4000 mi)	11000 km (7000 mi)	16000 km (10000 mi)	21000 km (13000 mi)	12 months	24 months	
※	Throttle operational system	I	I	I	I	I	I	I	<p>From 26000 km (16000 mi), repeat the maintenance intervals starting from 6000 km (4000 mi).</p> <p>* : The item is repaired by the personnel of the special repair store of KOVE repair shop. If the user has special tools, repair parts and repair ability, he can also repair by himself, and the repair knowledge can refer to this instruction manual.</p> <p>** : To ensure safety, this project can only be repaired by the personnel of the special repair store of KOVE.</p> <p>Attention (ride in muddy and dusty conditions):</p> <ol style="list-style-type: none"> 1. Air filter clean everyday. 2. Clean the suspension every day. <p>The tire pressure sensor needs to be replaced every 4-5 years, as the battery will drain and stop working.</p>
	Air filter	I/R	I/R	I/R	I/R	R	R	R	
※ ※	Valve clearance					I			
※	Engine oil	R	R	R	R	R	R	R	
※	Oil filter	R	R	R	R	R	R	R	
※	Timing chain tension	I	I	I	I	I	I	I	
	Driving chain tension	I & L	I & L	I & L	I & L	I & L	I & L	I & L	
	Brake pads wear	I	I	I	I	I	I	I	
※	Brake system	I	I	I	I	I	I	I	
※	Clutch	I	I	I	I	I	I	I	
※	Fastener	I	I	I	I	I	I	I	
※	Directional bearing	I	I	I	I	I	I	I	
※ ※	Rear spoke bearing	I	I	I	I	I	I	I	
※	Front and rear wheel bearing	I	I	I	I	I	I	I	
	Battery			I		I	I	I	
※	Fuel pipe and filter			R		R	R	R	
※	Spark plug			I		I	I	I	
※	Swingarm bearing					I & L	I & L	I & L	
※	Brake fluid						R	R	
	Coolant	I	I	I	I	I	I	R	
※ ※	Tire pressure sensor								Replace every 4-5 years

SERVICE SCHEDULE (500X/F, 510X/F, 525X/F, 400X/F)

The motorcycle should be maintained within the specified time, and for safety, it should only be serviced by the KOVE repair shop.

The symbols in the table have the following meanings:

I: Inspection, cleaning, adjustment R: replacement A: adjustment L: lubrication

ITEM		INITIAL	ODOMETER READING				PERIODIC INTERVAL		
		1000 km (600 mi)	7000 km (4400 mi)	13000 km (8000 mi)	19000 km (12000 mi)	25000 km (16000 mi)	12 months	24 months	
※	Throttle operational system	I	I	I	I	I	I	I	From 31000 km (20000 mi), repeat the maintenance intervals starting from 7000 km (4400 mi). *: The item is repaired by the personnel of the special repair store of KOVE repair shop. If the user has special tools, repair parts and repair ability, he can also repair by himself, and the repair knowledge can refer to this instruction manual. **: To ensure safety, this project can only be repaired by the personnel of the special repair store of KOVE. Attention (ride in muddy and dusty conditions): 1. Air filter clean everyday. 2. Clean the suspension every day. The tire pressure sensor needs to be replaced every 4-5 years, as the battery will drain and stop working.
	Air filter	I/R	I/R	I/R	I/R	R	R	R	
※※	Valve clearance					I			
※	Engine oil	R	R	R	R	R	R	R	
※	Oil filter	R	R	R	R	R	R	R	
※	Timing chain tension	I	I	I	I	I	I	I	
	Driving chain tension	I & L	I & L	I & L	I & L	I & L	I & L	I & L	
	Brake pads wear	I	I	I	I	I	I	I	
※	Brake system	I	I	I	I	I	I	I	
※	Clutch	I	I	I	I	I	I	I	
※	Fastener	I	I	I	I	I	I	I	
※	Directional bearing	I	I	I	I	I	I	I	
※※	Rear spoke bearing	I	I	I	I	I	I	I	
※	Front and rear wheel bearing	I	I	I	I	I	I	I	
	Battery			I		I	I	I	
※	Fuel pipe and filter			R		R	R	R	
※	Spark plug			I		I	I	I	
※	Swingarm bearing					I & L	I & L	I & L	
※	Brake fluid						R	R	
	Coolant	I	I	I	I	I	I	R	
※※	Tire pressure sensor								Replace every 4-5 years